PS-LX320/340

SERVICE MANUAL

PS-LX320:
US Model
Canadian Model
AEP Model
UK Model

PS-LX340:
US Model
Canadian Model
AEP Model

PHOTO : PS-LX320

SPECIFICATIONS

Turntable

Platter	30.0 cm (12 in.), aluminum-alloy diecast
Motor	DC servo motor
Drive system	Belt drive
Control system	DC servo control system
Speed	33⅓ rpm, 45 rpm
Starting characteristics	Comes to nominal speed within ½ revolution (33⅓ rpm)
Wow and flutter	0.045% (WRMS)
Signal-to-noise ratio	70 dB (DIN-B)
Automatic system	Lead-in, return, reject, repeat, record size selection

Tonearm

PX-LX320 :

Type	Dynamically balanced
Pivot-to-stylus length	216.5 mm (8½ in.)
Overhang	16.5 mm (21/32 in.)

PS-LX340 :

Type	Statically balanced
Pivot-to-stylus length	216.5 mm (8½ in.)
Overhang	16.5 mm (21/32 in.)
Usable cartridge	Plug-in type, 6 g

Cartridge

PS-LX320 : VL-24G

Type	Moving magnet type
Frequency response	20 Hz to 20 kHz
Channel separation	20 dB at 1 kHz
Output voltage	2.5 mV at 1 kHz, 5 cm/sec.
Load impedance	50 to 100 kilohms
Tracking force	2 g
Stylus	Sony ND-142G (conical 0.6 mil diamond)
Weight	8 g

PS-LX340 (US, Canadian model): VL-45G
Supplied for certain models

Type	Moving magnet type
Frequency response	20 Hz to 20 kHz
Channel separation	20 dB at 1 kHz
Output voltage	3.5 mV at 1 kHz, 5 cm/sec.
Load impedance	47 to 100 kilohms
Tracking force	1.25 g
Stylus	Sony ND-145G
Weight	6 g

— Continued on page 2 —

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY SHADING AND MARK ⚠ ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

ATTENTION AU COMPOSANT AYANT RAPPORT À LA SÉCURITÉ!

LES COMPOSANTS IDENTIFIÉS PAR UNE TRAME ET UNE MARQUE ⚠ SUR LES DIAGRAMMES SCHÉMATIQUES ET LA LISTE DES PIÈCES SONT CRITIQUES POUR LA SÉCURITÉ DE FONCTIONNEMENT. NE REMPLACER CES COMPOSANTS QUE PAR DES PIÈCES SONY DONT LES NUMÉROS SONT DONNÉS DANS CE MANUEL OU DANS LES SUPPLÉMENTS PUBLIÉS PAR SONY.

MICROFILM

STEREO TURNTABLE SYSTEM

SONY®

AUD

PS-LX320 (AEP model): XL-300G

Type	Moving magnet type
Frequency response	20 Hz to 20 kHz
Channel separation	20 dB at 1 kHz
Output voltage	3 mV at 1 kHz, 5 cm/sec.
Load impedance	47 to 100 kilohms
Tracking force	1.25 g
Stylus	Sony ND-300G
Weight	6 g

General

Power requirements	US, Canadian model: 120 V ac, 60 Hz AEP model: 220 V ac, 50/60 Hz UK model: 240 V ac, 50/60 Hz
Power consumption	7 W
Dimensions	Approx. 430 x 110 x 360 mm (w/h/d) (17 x 4 3/8 x 14 in.) including projecting parts and controls
Weight	Approx. 3.5 kg (7 lbs 12 oz), net Approx. 4.5 kg (9 lbs 10 oz), in shipping carton

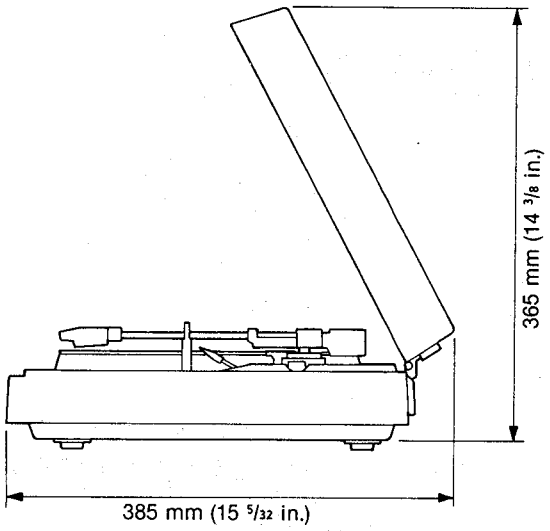

MODEL IDENTIFICATION
— Specification Label —

PS-LX320

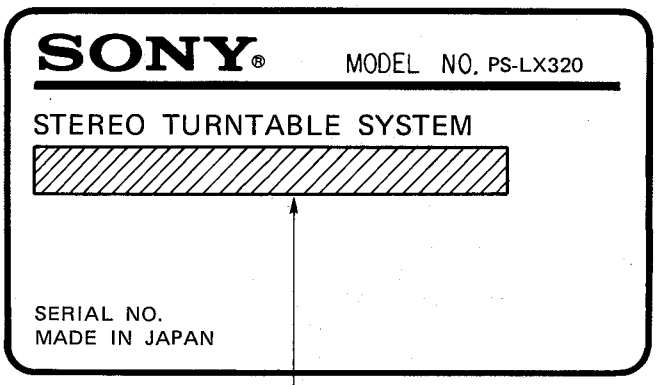

US, Canadian model: AC: 120V ~ 60 Hz 7W
AEP model: AC: 220V ~ 50/60Hz 7W
UK model: AC: 240V ~ 50/60Hz 7W

PS-LX340

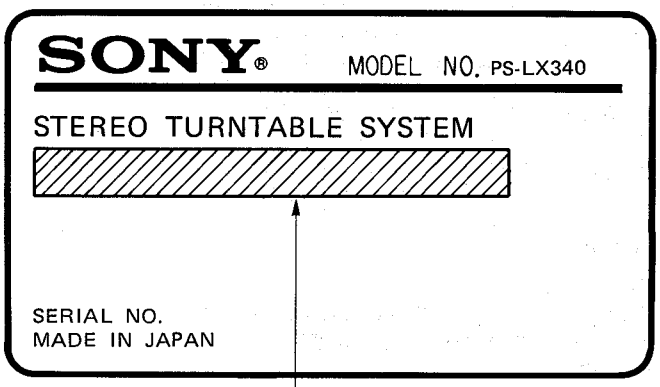

US, Canadian model: AC: 120V ~ 60Hz 7W
AEP model: AC: 220V ~ 50/60Hz 7W

SAFETY CHECK-OUT (US Model)

After correcting the original service problem, perform the following safety check before releasing the set to the customer:
Check the antenna terminals, metal trim, "metallized" knobs, screws, and all other exposed metal parts for AC leakage. Check leakage as described below.

LEAKAGE TEST

The AC leakage from any exposed metal part to earth ground and from all exposed metal parts to any exposed metal part having a return to chassis, must not exceed 0.5 mA (500 microampers). Leakage current can be measured by any one of three methods.

1. A commercial leakage tester, such as the Simpson 229 or RCA WT-540A. Follow the manufacturers' instructions to use these instruments.
2. A battery-operated AC milliammeter. The Data Precision 245 digital multimeter is suitable for this job.
3. Measuring the voltage drop across a resistor by means of a VOM or battery-operated AC voltmeter. The "limit" indication is 0.75 V, so analog meters must have an accurate low-voltage scale. The Simpson 250 and Sanwa SH-63Trd are examples of a passive VOM that is suitable. Nearly all battery operated digital multimeters that have a 2 V AC range are suitable. (See Fig. A)

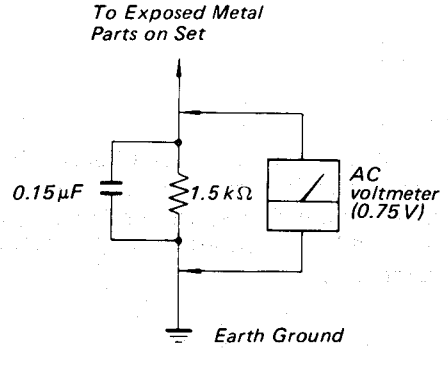

Fig. A. Using an AC voltmeter to check AC leakage.

CAUTION ON INSTALLING BELT

When installing belt, glossy should be faced outside.

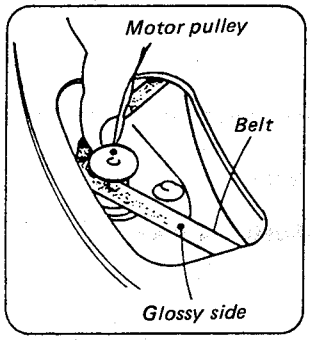

SECTION 1
OUTLINE

1-1. PARTS IDENTIFICATION

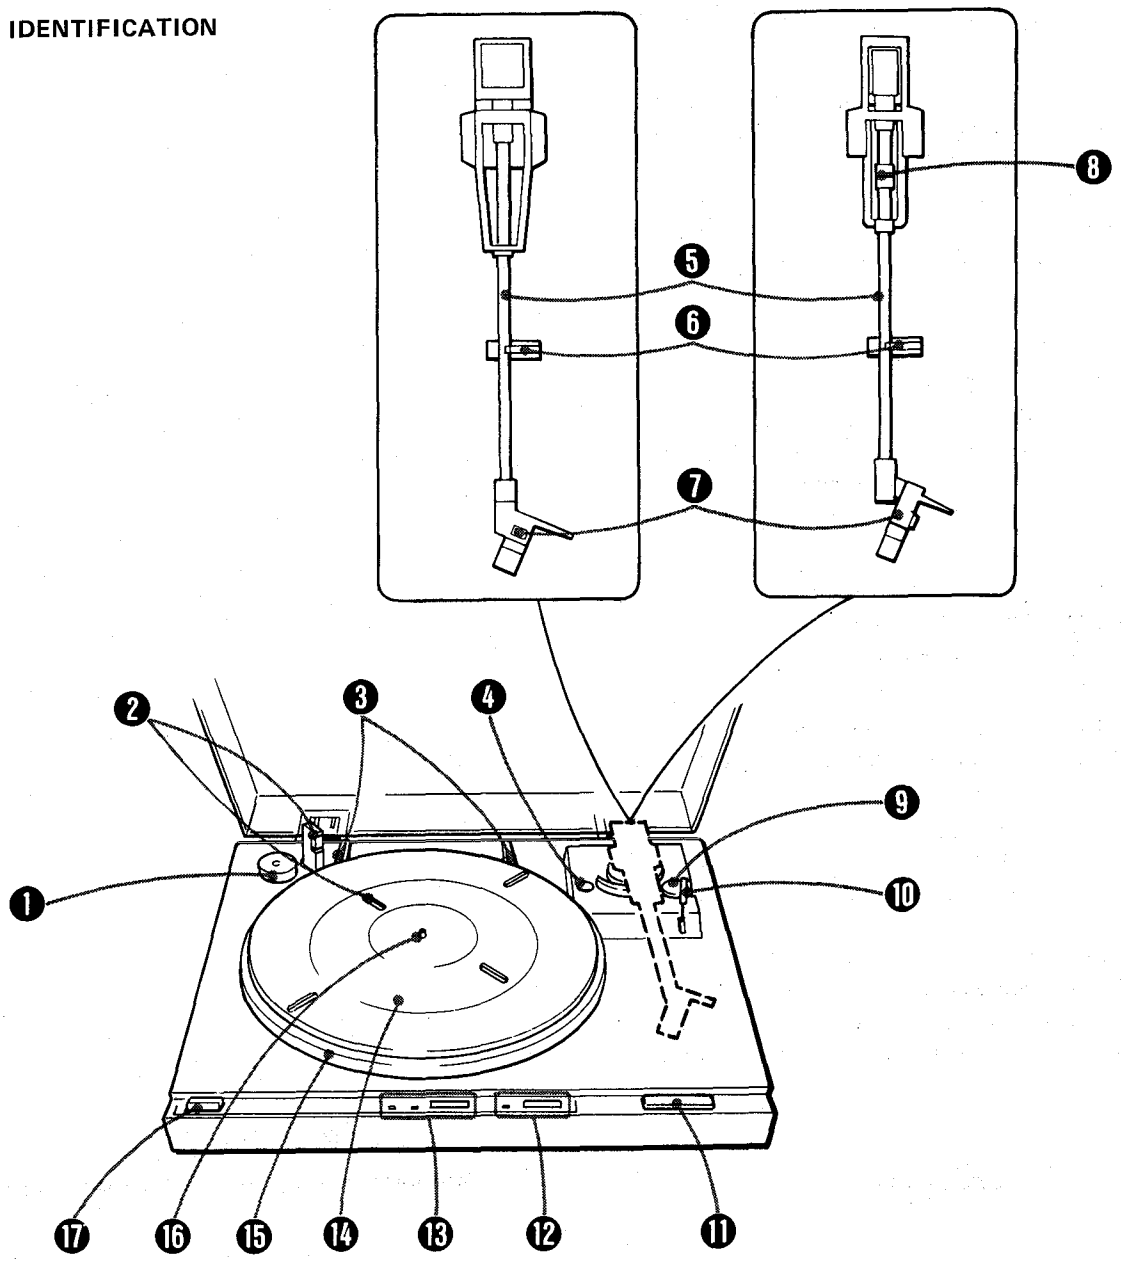

❶ 45-rpm adaptor

❷ Auto-record-size selection holes and lamp

❸ Disc centering guides

❹ Drop point adjustment hole

❺ Tonearm

❻ Arm rest

❼ Cartridge (not supplied with US certain models of PS-LX340)

❽ Sub-weight

❾ ANTI-SKATING compensator
Normally, set it at the center position. If the stylus is driven inward when the tone arm is lowered to the lead-in groove, turn the ANTI-SKATING compensator to ⊕. If the stylus is driven outward, turn the ANTI-SKATING compensator to ⊖.

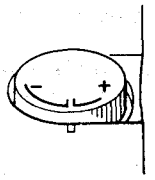

Center position

⑩ ▼/▼ (cueing) lever
Used to lift or lower the tonearm.

⑪ START/STOP button

⑫ REPEAT button and indicator

⑬ SPEED selector and indicators
Set the SPEED selector according to the speed of the record to be played. For 45-rpm records, depress the selector when a 45 rpm record is to be played. For a 33⅓ records, press it again.

⑭ Rubber mat

⑮ Turntable platter

⑯ Center spindle

⑰ POWER switch

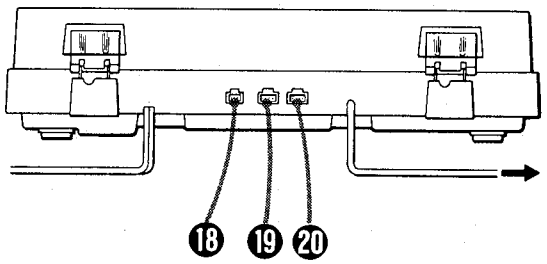

⑱ SYNC connector
Connect to the SYNC connector of the optional Sony tape deck equipped with a 3-pin flat connector.

⑲ CONTROL S IN connector
Connect to the CONTROL S OUT or R REMOTE OUT connector of an optional Sony system control tuner or receiver for whole audio system remote control.

⑳ CONTROL S OUT connector
Connect to the CONTROL S IN or R REMOTE OUT connector of Sony audio equipment equipped with a 4-pin remote control connector for remote control operation.

1-2. BLOCK DIAGRAM

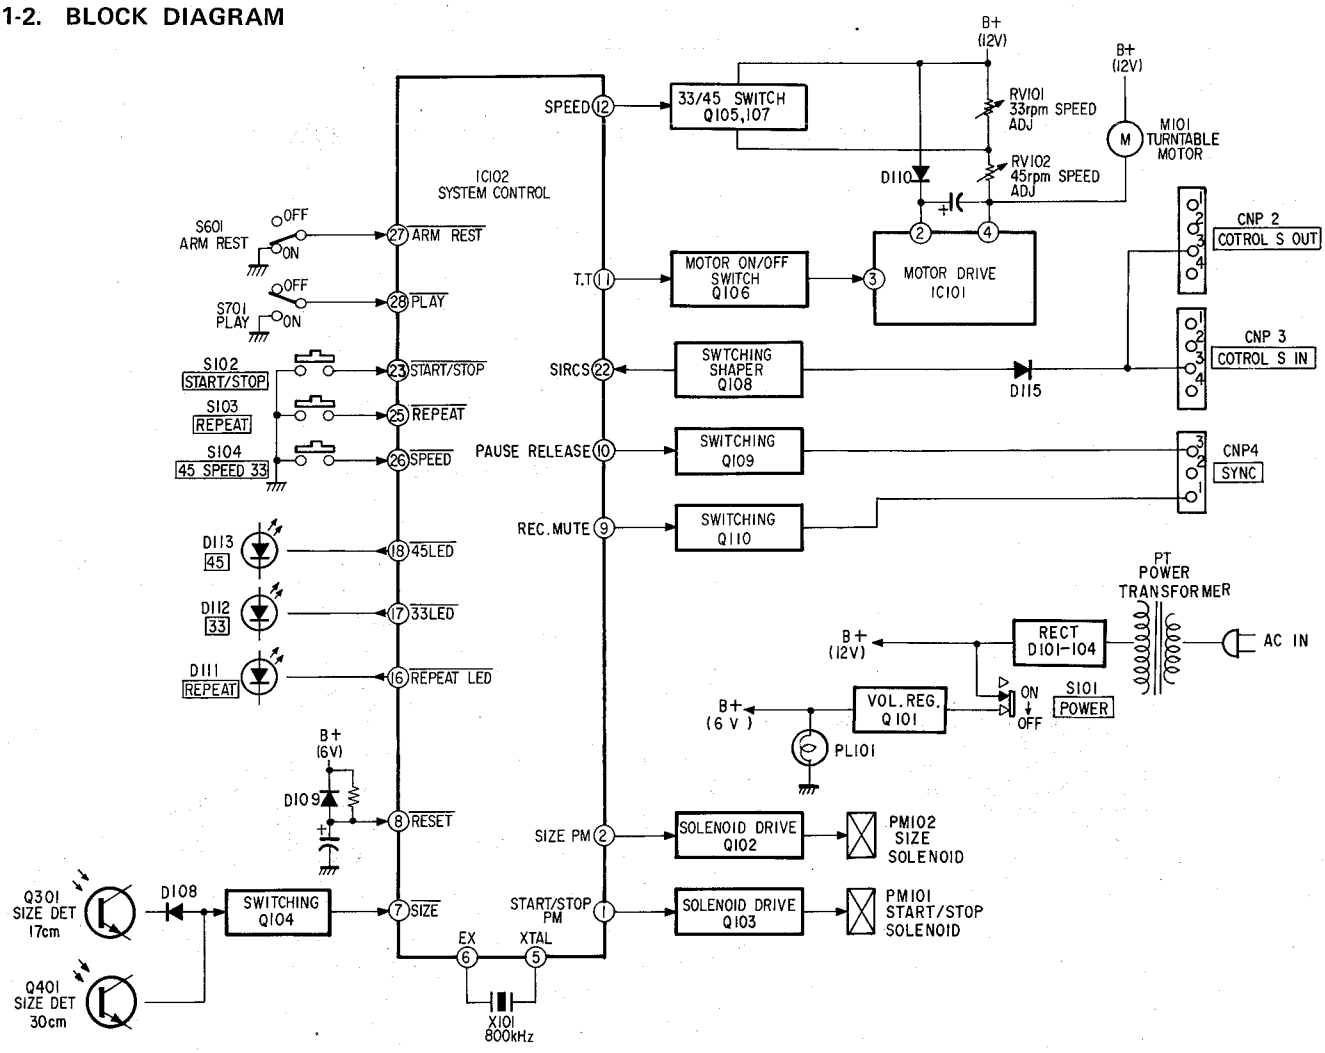

SECTION 2
DISASSEMBLY

2-1. REMOVAL

• Follow the disassembly procedure in the numerical order given.

Remove bottom plate.
(PTPWH 3 x 12 9 pcs)

TURNTABLE MOTOR (M101)

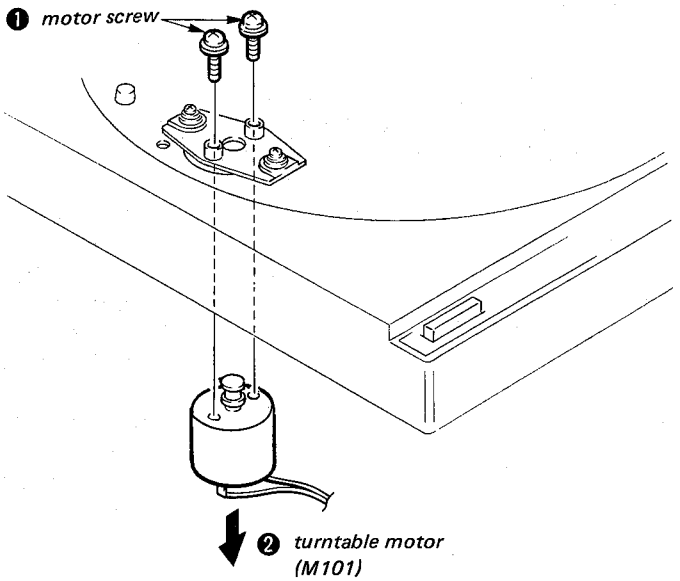

S/S SW BOARD

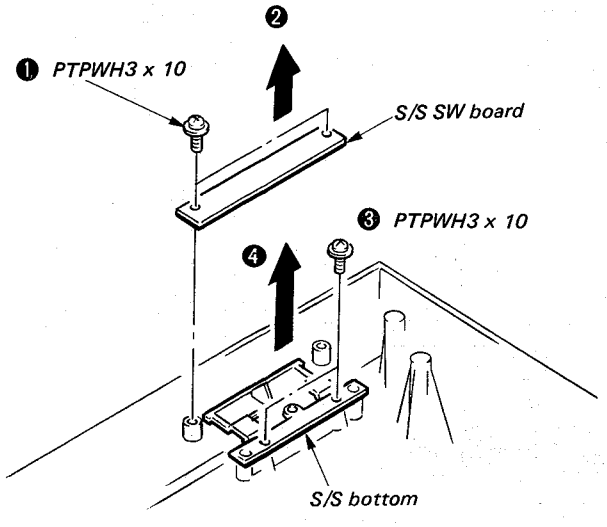

LAMP BOARD

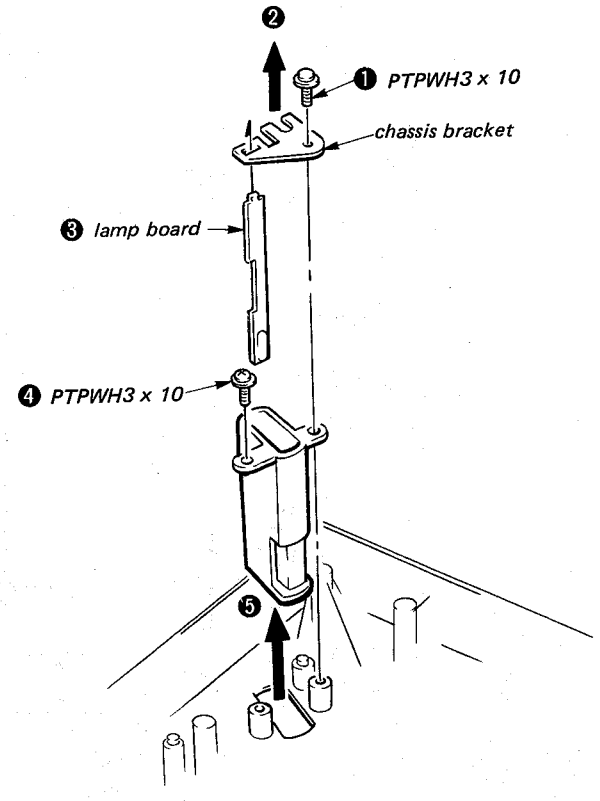

SYSTEM CONTROL (A) BOARD

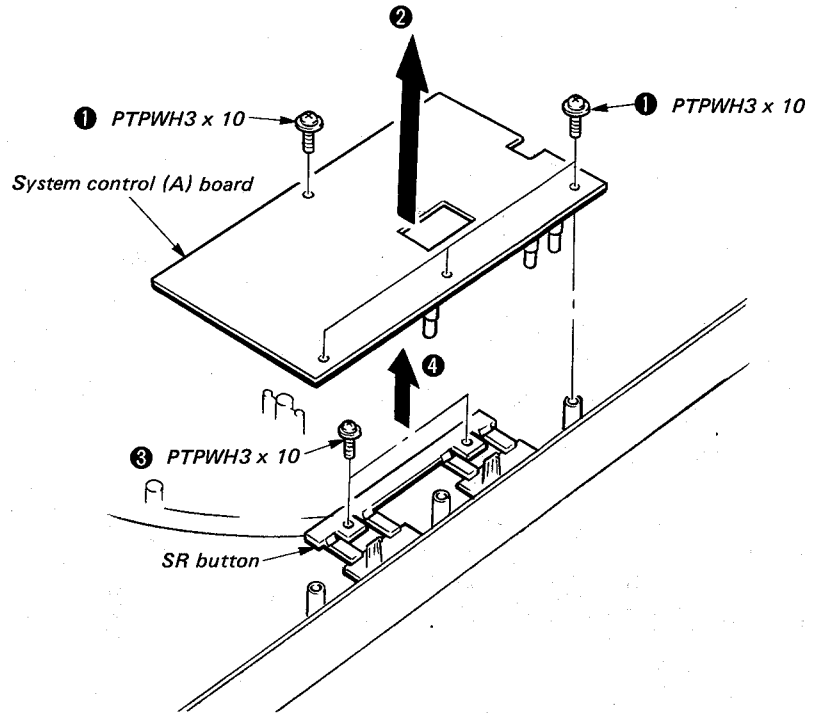

SYSTEM CONTROL (B) BOARD

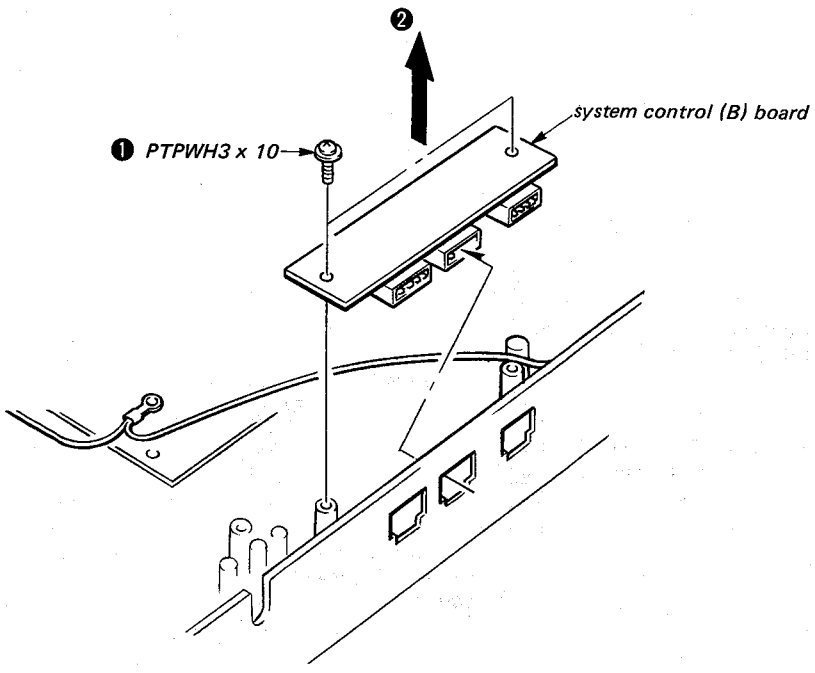

2-2. INSTALLATION

PUSH ROD, LIFTER LEVER

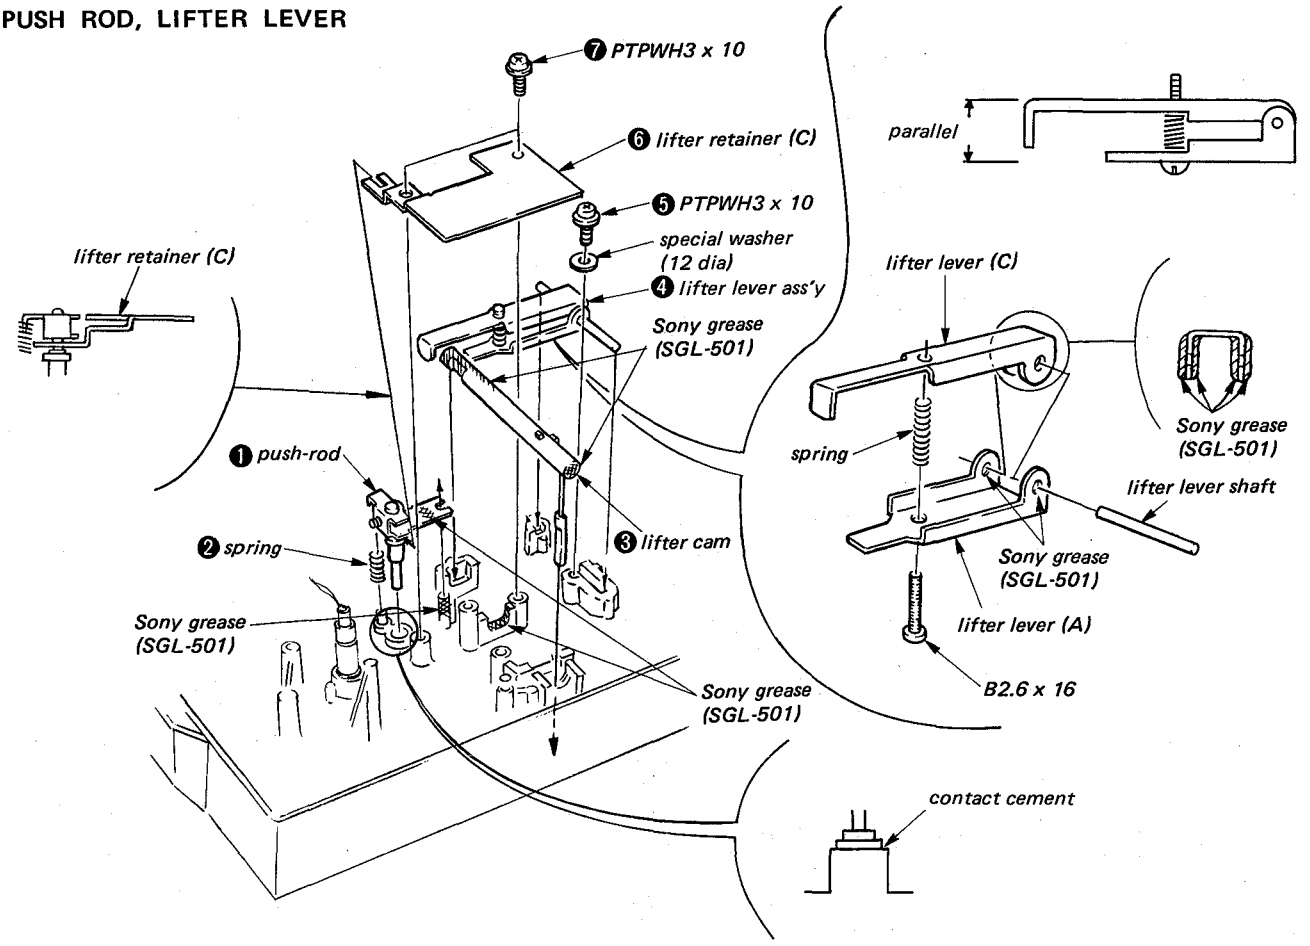

Caution for installation:

When the push rod is replaced, apply silicon oil (viscosity: 500,000 cs) to the push rod as illustrated below.

Caution:

When lubricating, rotate and move the push rod up and down a few times.

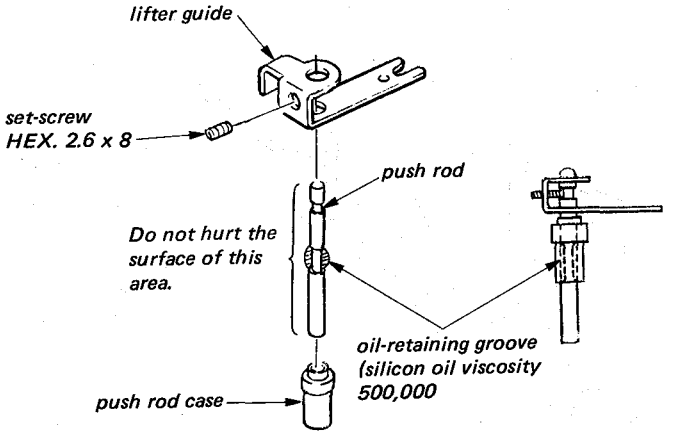
lifter guide
set-screw HEX. 2.6 x 8
push rod
Do not hurt the surface of this area.
oil-retaining groove (silicon oil viscosity 500,000
push rod case

TONE ARM UNIT

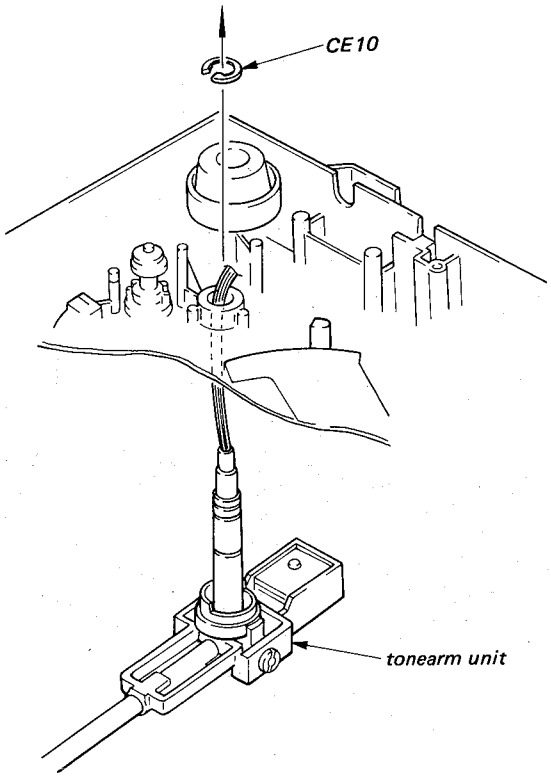

CHASSIS BLOCK

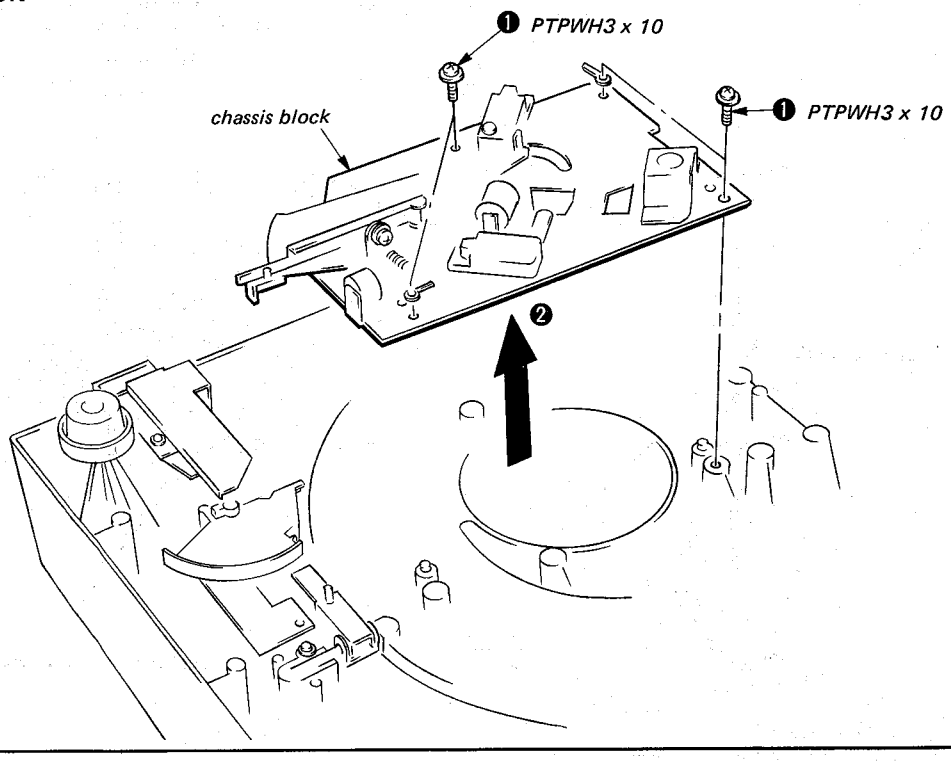

INDEX LEVER (C)

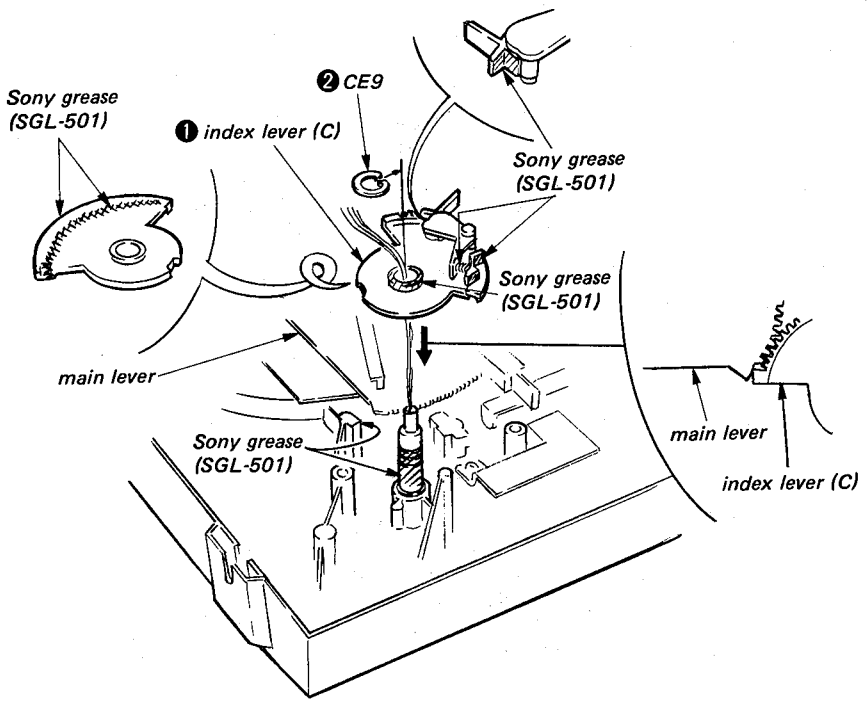

INDEX LEVER (B)

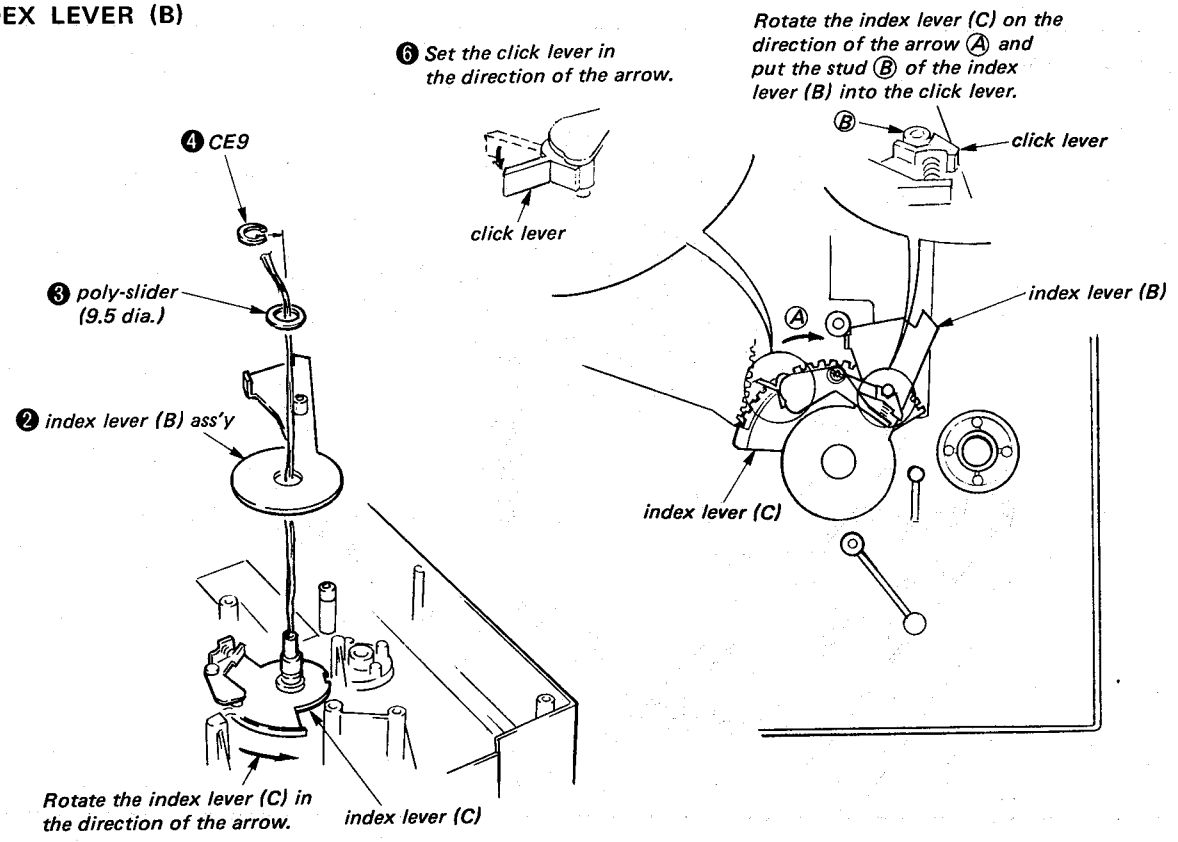
❻ Set the click lever in the direction of the arrow.
Rotate the index lever (C) on the direction of the arrow Ⓐ and put the stud Ⓑ of the index lever (B) into the click lever.
Ⓑ
click lever
click lever
❹ CE9
❸ poly-slider (9.5 dia.)
❷ index lever (B) ass'y
Ⓐ
index lever (B)
index lever (C)
Rotate the index lever (C) in the direction of the arrow.
index lever (C)

ARM LEVER

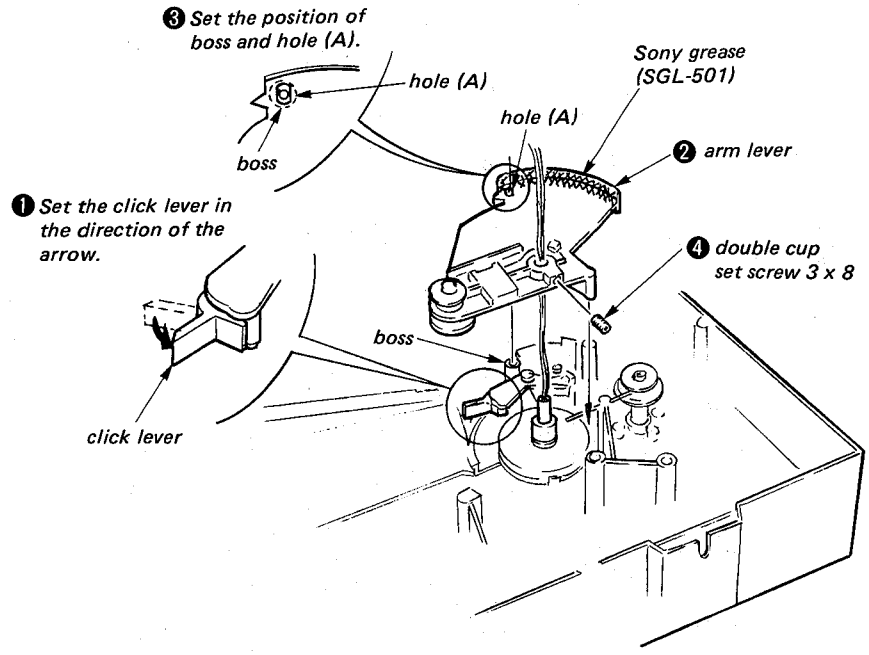
❸ Set the position of boss and hole (A).
hole (A)
boss
Sony grease (SGL-501)
hole (A)
❷ arm lever
❶ Set the click lever in the direction of the arrow.
❹ double cup set screw 3 x 8
boss
click lever

IFC (ANTI-SKATING) KNOB

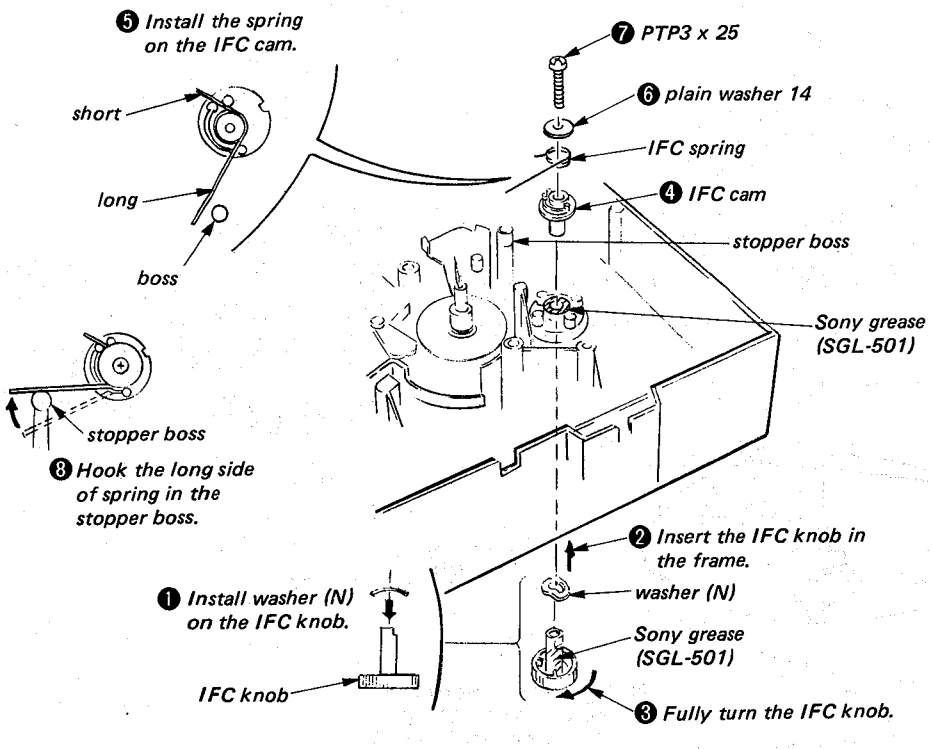

PHONO BOARD

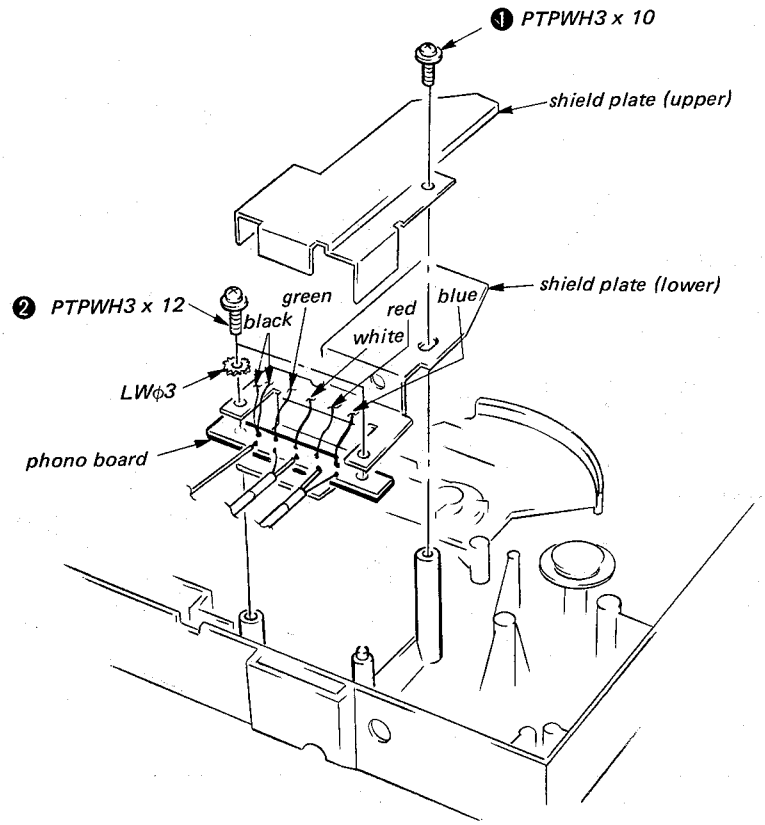

DRIVE GEAR

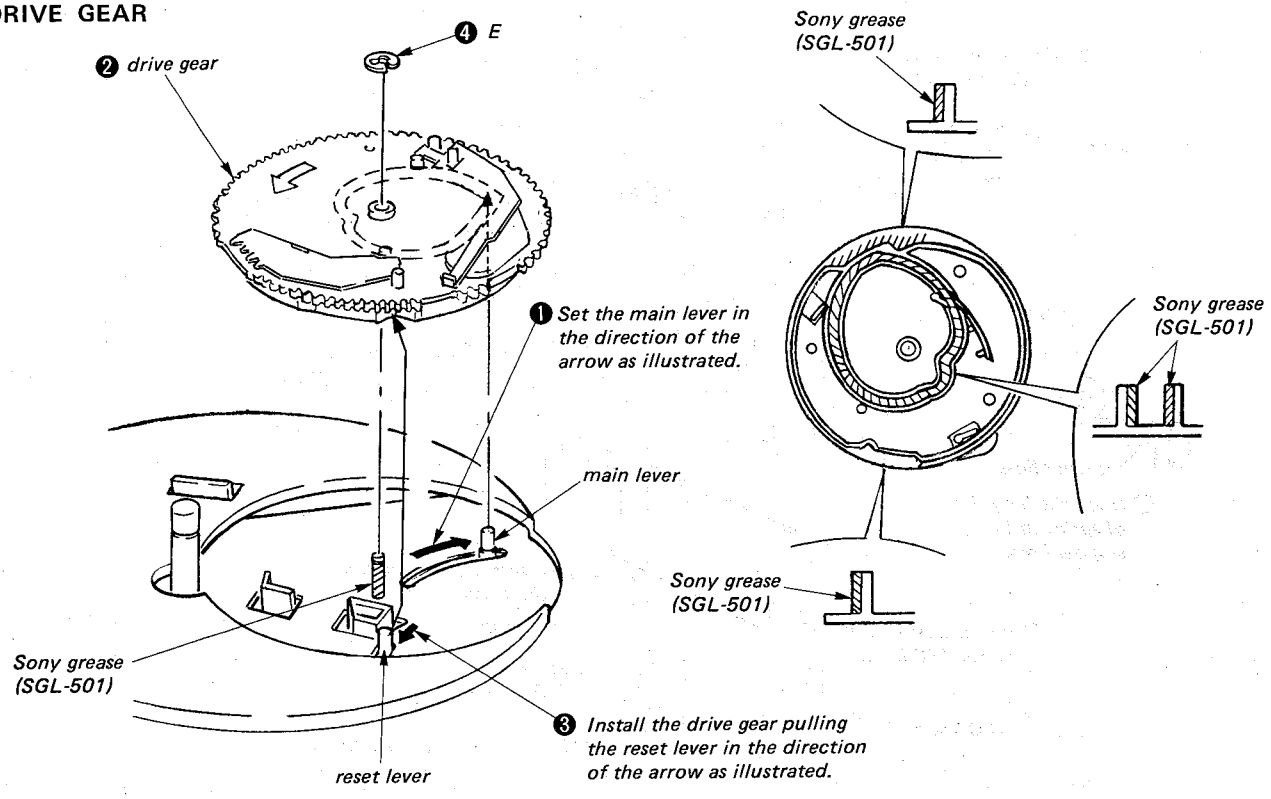
❹ E
❷ drive gear
Sony grease (SGL-501)
❶ Set the main lever in the direction of the arrow as illustrated.
main lever
Sony grease (SGL-501)
Sony grease (SGL-501)
Sony grease (SGL-501)
❸ Install the drive gear pulling the reset lever in the direction of the arrow as illustrated.
reset lever

TONEARM (PS-LX320)

1. LEAD WIRE INSTALLATION

1-1. Pass piano wire with lead wires through pipe as shown in Fig. A.

1-2. Pass piano wire with lead wires through center joint assy as shown in Fig. B.

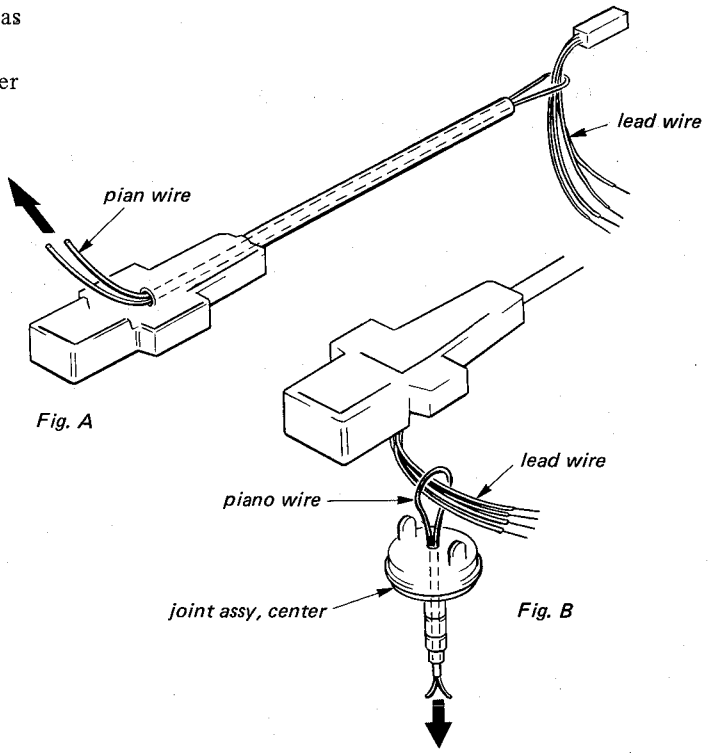

Fig. A

Fig. B

2. ARM PIPE REMOVAL

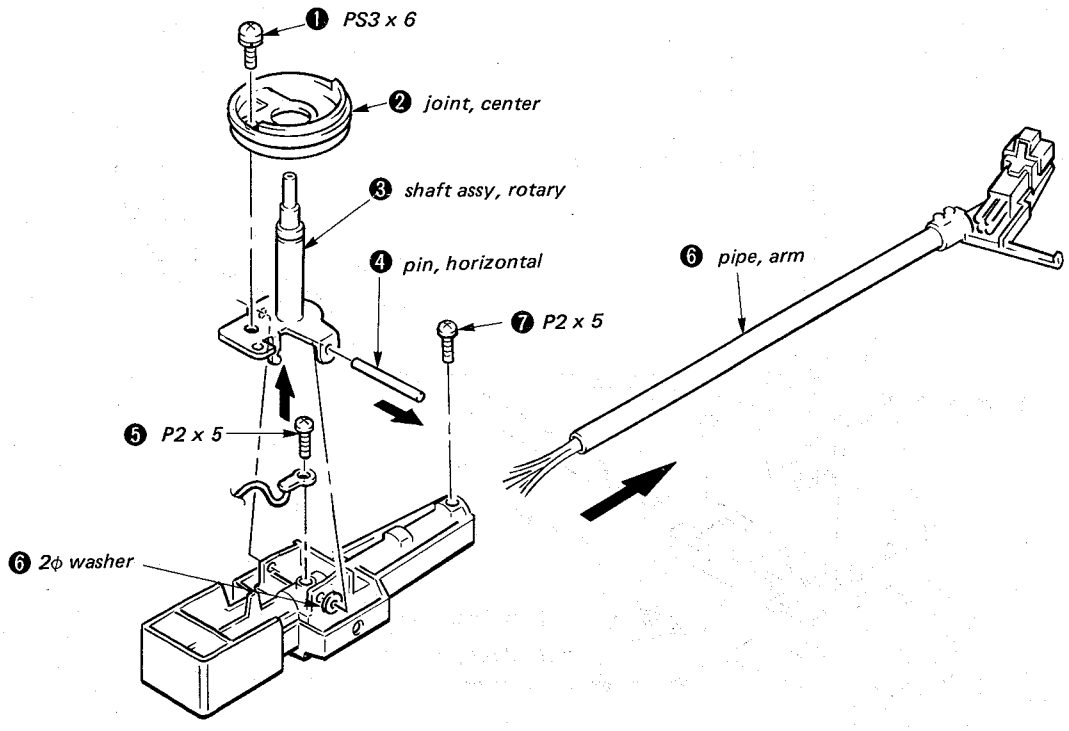

TONEARM (PS-LX340)

1. LEAD WIRE INSTALLATION

1-1. Pass piano wire with lead wires through pipe as shown in Fig. A.

1-2. Pass piano wire with lead wires through center joint assy as shown in Fig. B.

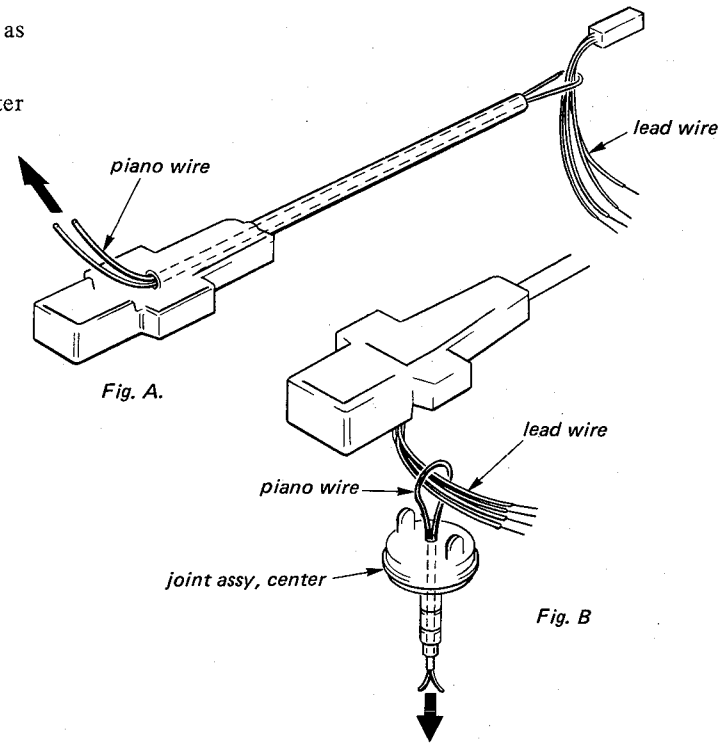

Fig. A.

Fig. B

2. ARM PIPE REMOVAL

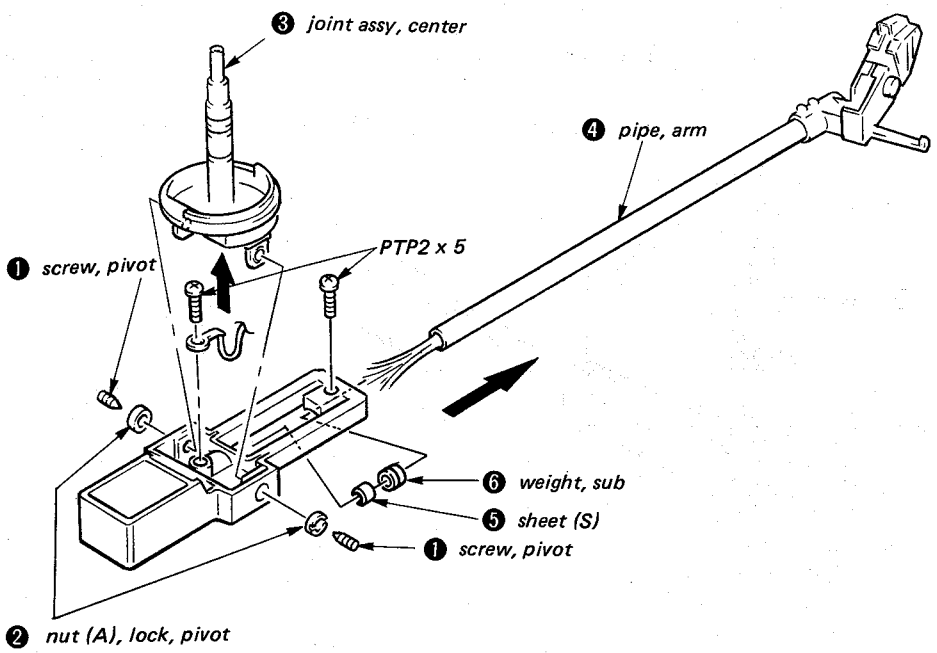

SECTION 3
ADJUSTMENTS

3-1. MECHANICAL ADJUSTMENTS

Longitudinal Sensitivity Adjustment (PS-LX310/310(C))

1. Install the cartridge and slide the sub weight at ⊖ side.
2. Place a weight of about 5g on the pipe joint.
3. Adjust the weight position so that the arm is balanced.
4. Place a weight of about 150mg on the cartridge (right over the stylus).
5. Adjust the pivot screw so that the stylus tip goes down 5mm or more.

Note: If the pivot screw is secured excessively, the pivot bearing may be damaged.

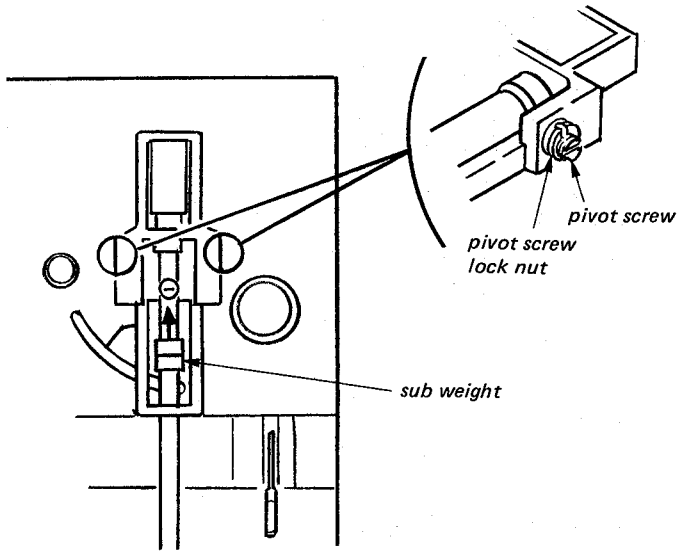

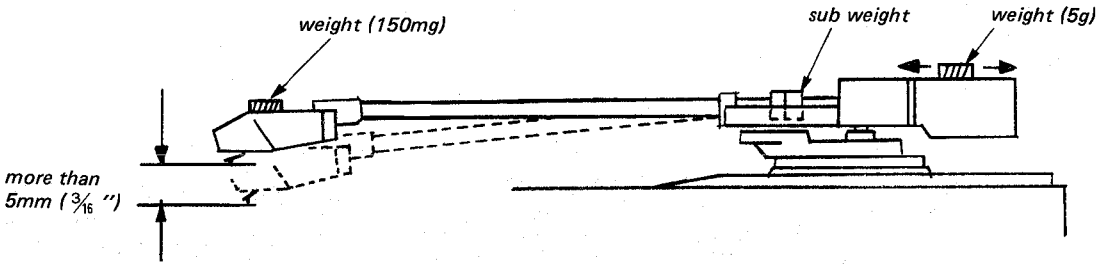

Stylus Force Adjustment (PS-LX320)

1. Turn the adjustment screw to obtain zero balance.
2. Turn the adjustment screw again so that the stylus force becomes 2g on the stylus force gauge.

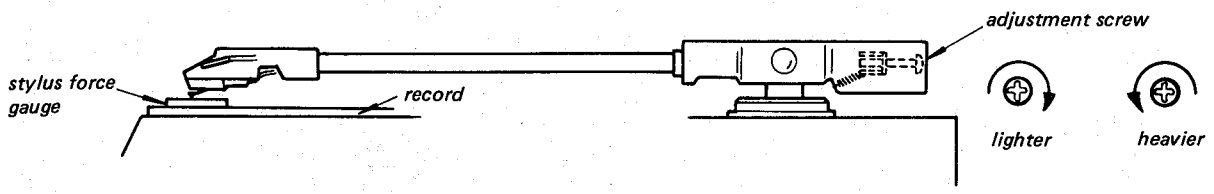

Shell's Horizontal Balance Adjustment

Loosen the neck cylinder screw and adjust so that section Ⓐ (shell slant) is less than 0.5mm.

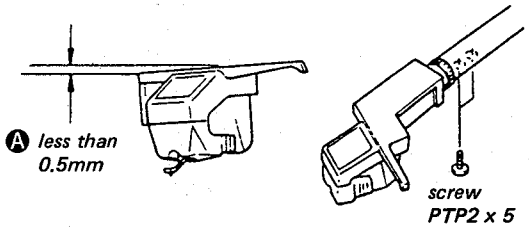

Brake Lever Position Adjustment

1. Rotate the drive gear in the direction of the arrow by hand, and set the reset lever for reset position (show the Fig. 1).
   Then, confirm that the size lever is contact with chassis lightly (shown in the Fig. 2, Ⓐ).
2. Adjust the adjustment screw so that a gap becomes in 0.3 ±0.2mm (shown in the Fig. 3).
3. After the adjustment, lock the adjustment screw with locking compound.

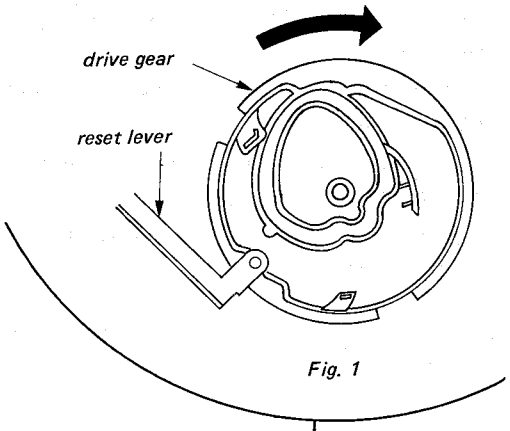

Fig. 1

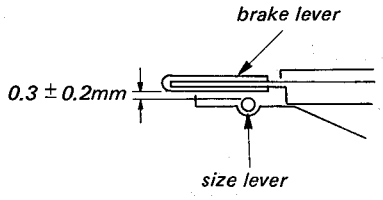

Fig. 3

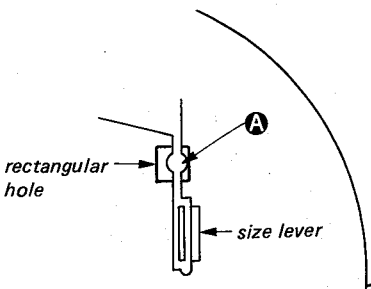

Fig. 2

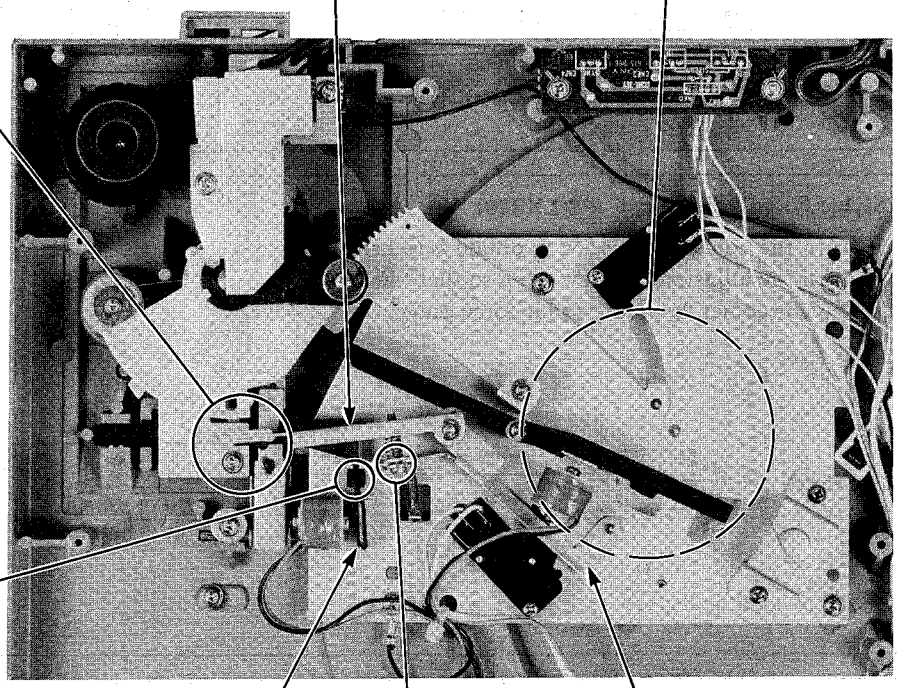

Stylus Height Adjustment

Note: Perform both adjustment for manual and automatic operations.

1. Automatic

1) Put a test record on the mat.
2) Depress the lifter lever to make a lifterdown mode.
3) Move the tonearm to out of groove at record by hand.
4) Rotate the turntable by hand and at make tonearm lead-in.
5) Move the tonearm to out of groove of record by hand again.
6) Rotate the turntable by hand and make the tonearm.
7) Then, loosen the adjustment screw (A) and adjust the height of the tonearm lifter so that the stylus height becomes in 4 – 8mm.
8) Rotate the turntable by hand slowly and move the tonearm to the most outer groove of record.
9) Confirm that stylus height becomes in 4–8mm.

2. Manual

1) Put a test record on the mat.
2) Move the tonearm to out of groove of record by hand.
3) Rotate the turntable by hand and make the tonearm lead-in.
4) Raise the lifter lever to make a lifter-up mode.
5) Move the tonearm until most outer groove of record by hand.
6) Adjust the adjustment screw (B) so that the stylus height becomes in 4–8mm.
7) Move the tonearm to the out of groove of record by hand.
   Confirm that stylus height becomes in 4–8mm.
8) Rotate the turntable by hand and return the tonearm to arm rest.
9) After the adjustment, lock the portion Ⓐ with suitable locking compound.

Note:
- Stylus height difference should be within 2mm, between automatic and manual operation. When the arm returns.
- The tonearm should be not contact with the top part of the rest when the tonearm returns.

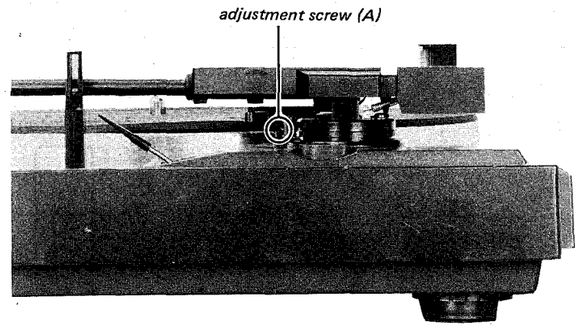

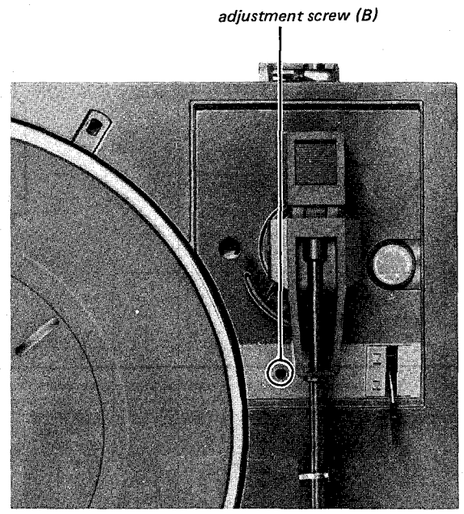

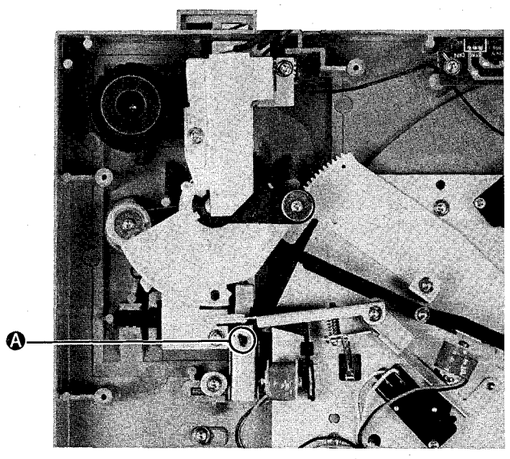

Stylus Drop-point Adjustment

Note: Stylus force adjustment should be completed.

1. Put a test record YFSC-16 on the mat.
2. Set the SPEED switch to 33.
3. Press the START/STOP button.
4. By using a screwdriver, turn the adjustment screw so that the stylus tip drops on the record at the 4–16 counts position.

Note: The proper adjustment for a 30cm record is also correct for a 17cm record.

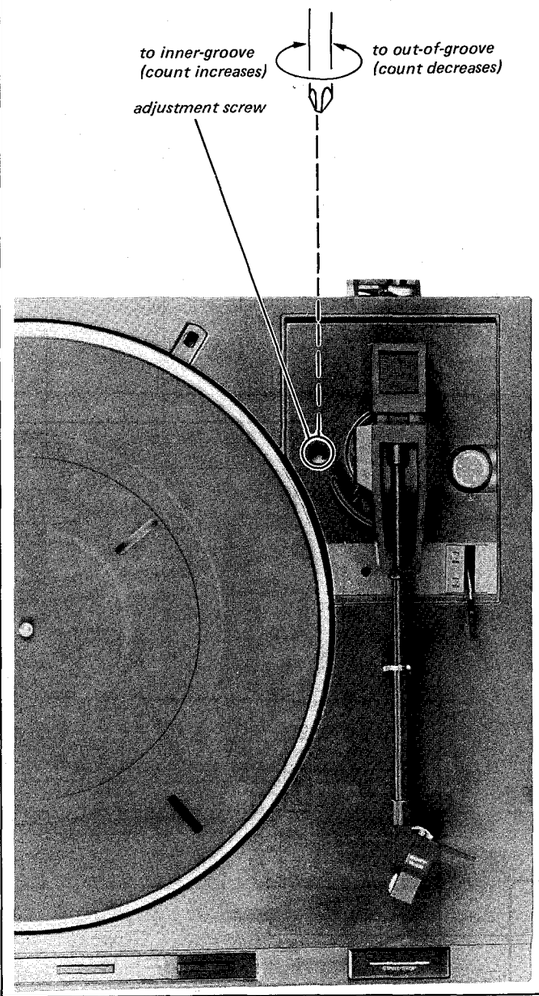

Speed Adjustment

Note: Be sure to perform 45rpm adjustment before 33rpm.

1. Put a stroboscope board on the mat.
2. Set the SPEED switch to 45.
   Press the START/STOP button.
   Adjust RV102 so that the stripped pattern of stroboscope board is stationary.
3. Set the SPEED switch to 33.
   Adjust RV101 in the same way.

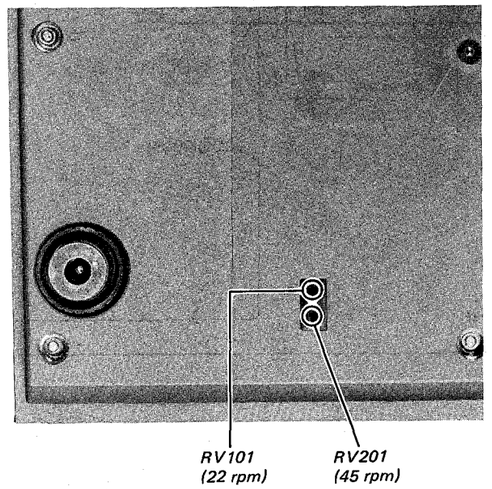

LM6416E-557



μPC1470H



2SB808
DTC114ES



PS-LX320/340

l automatic

lifterdown

at record

at make

of record

make the

(A) and
er so that
1.

and move
groove of

1 4–8mm.

e of record

make the

r-up mode.
groove of

o that the

groove of

in 4–8mm.
return the

on Ⓐ with

iin 2mm,
on.

with the
i returns.

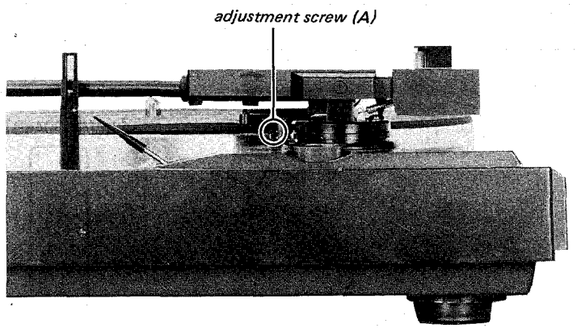

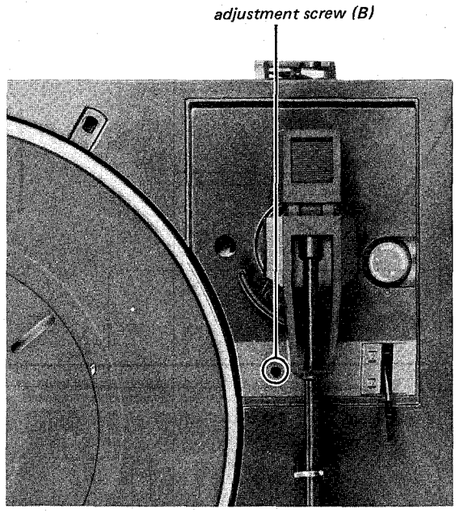

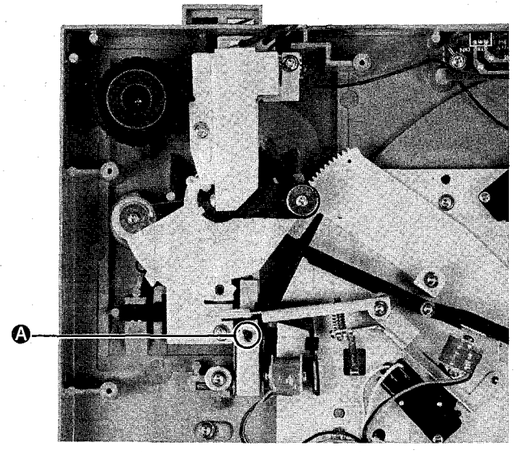

3-2. ELECTRICAL ADJUSTMENT

Stylus Drop-point Adjustment

Note: Stylus force adjustment should be completed.

1. Put a test record YFSC-16 on the mat.
2. Set the SPEED switch to 33.
3. Press the START/STOP button.
4. By using a screwdriver, turn the adjustment screw so that the stylus tip drops on the record at the 4–16 counts position.

Note: The proper adjustment for a 30cm record is also correct for a 17cm record.

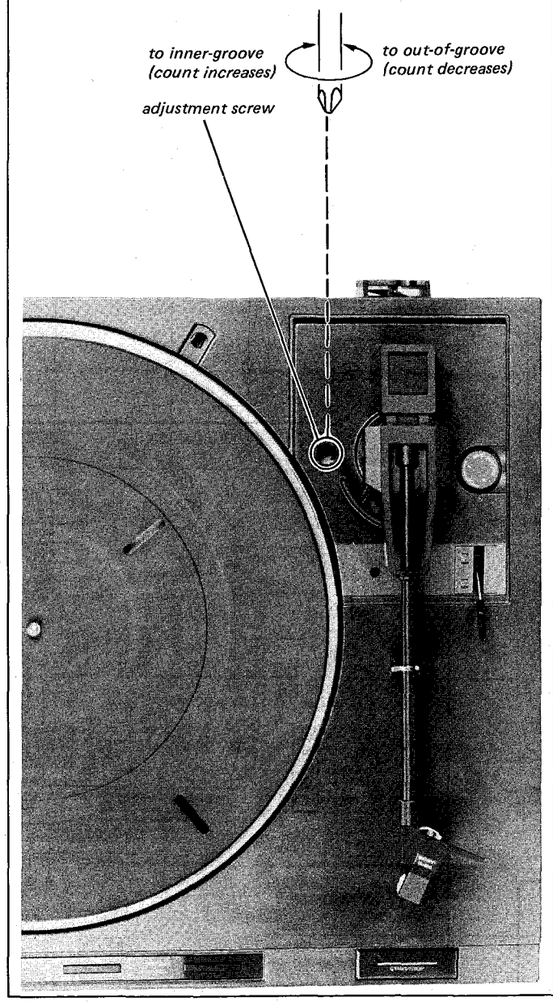

Speed Adjustment

Note: Be sure to perform 45rpm adjustment before 33rpm.

1. Put a stroboscope board on the mat.
2. Set the SPEED switch to 45.
   Press the START/STOP button.
   Adjust RV102 so that the stripped pattern of stroboscope board is stationary.
3. Set the SPEED switch to 33.
   Adjust RV101 in the same way.

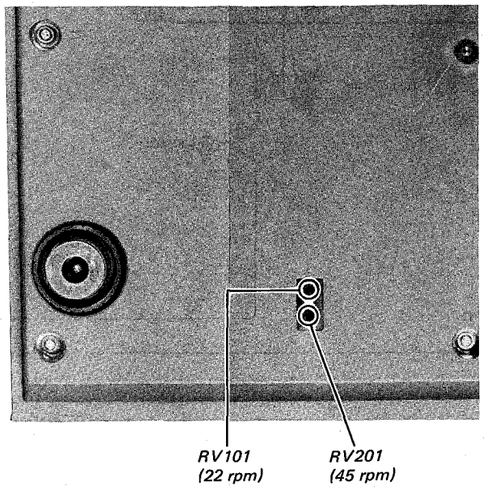

• Semiconductor Lead Layouts

LM6416E-557



2SA733
2SD1388

10E-2
RD6.8E-N1



μPC1470H



2SD809



1SS202-1



2SB808
DTC114ES

DTC114EF



GL-5HD21

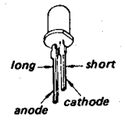

PD401



- See page 18 for semiconductor lead layouts.

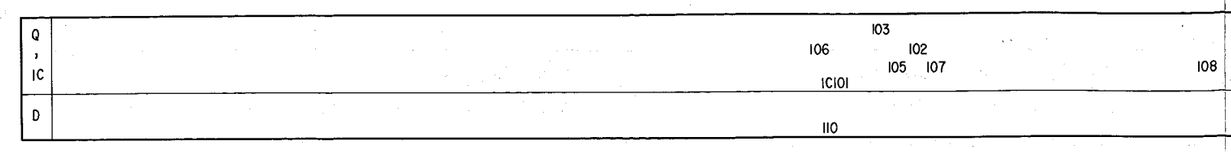

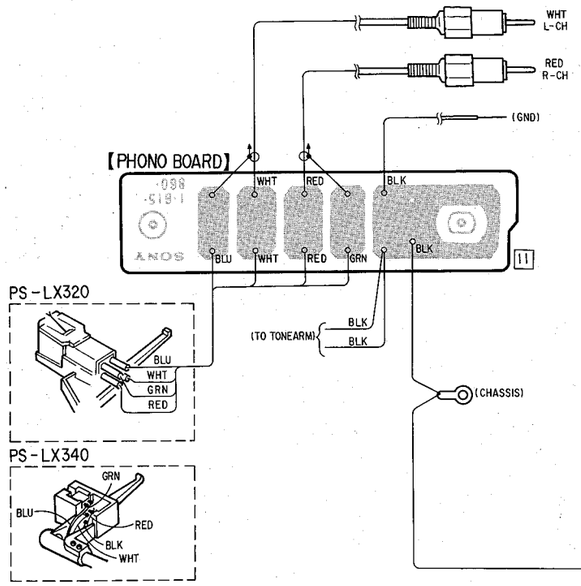

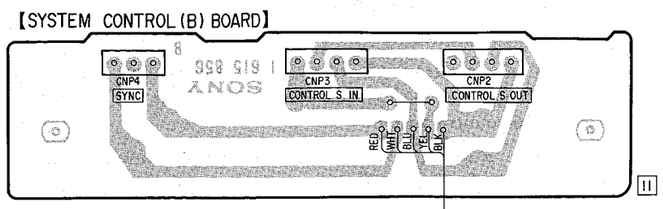

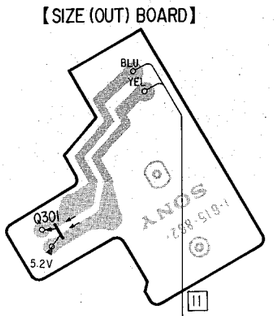

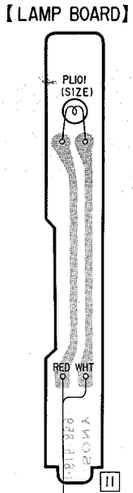

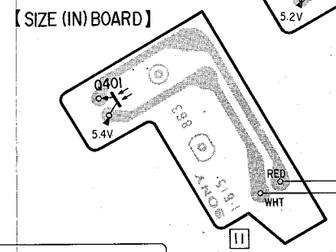



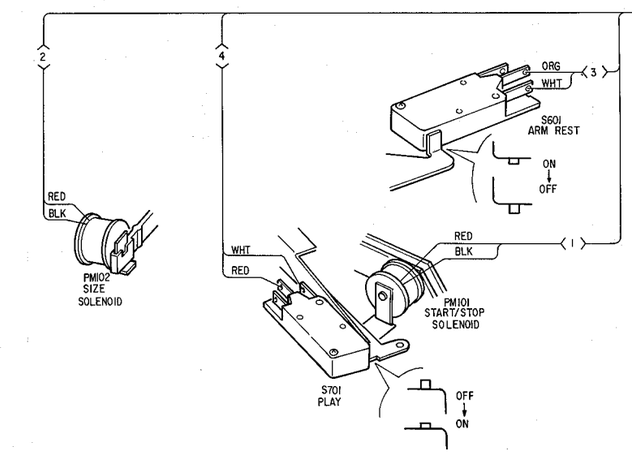

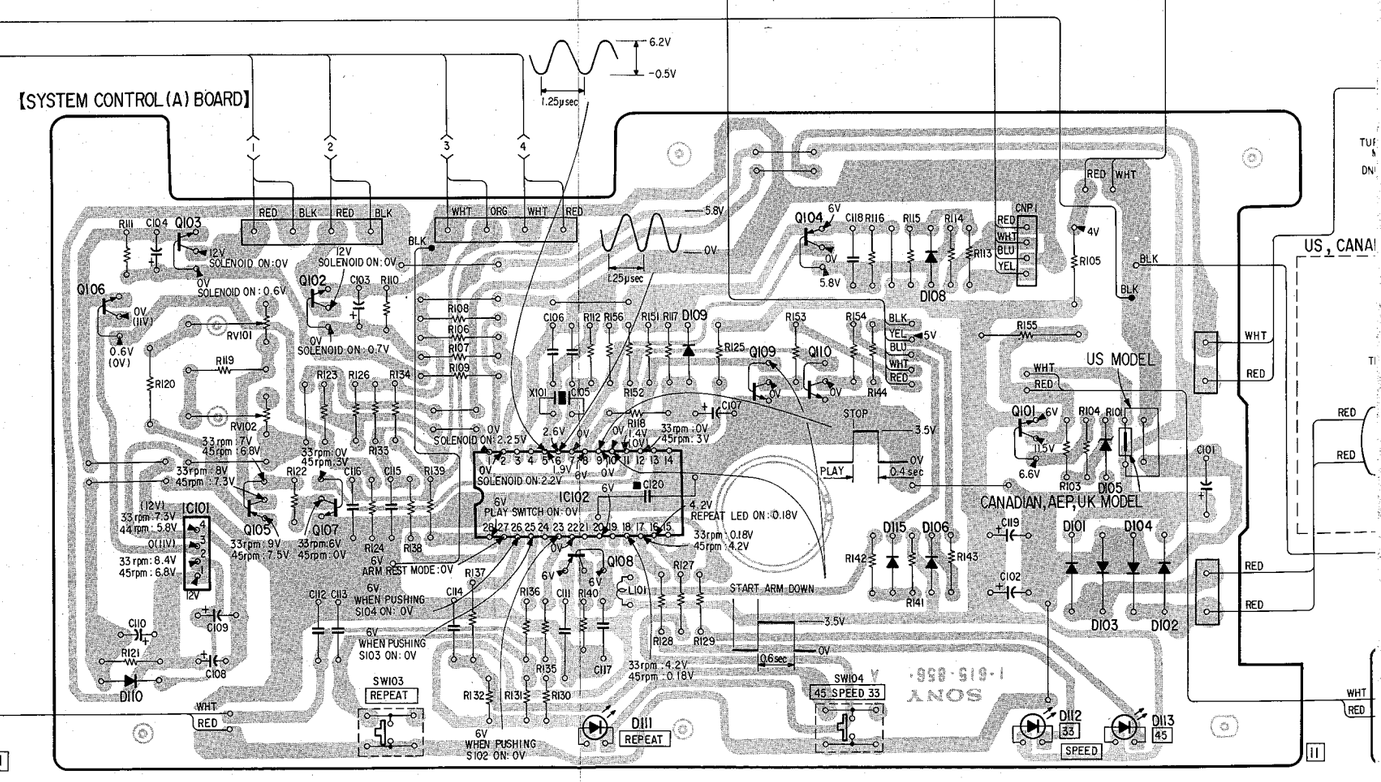

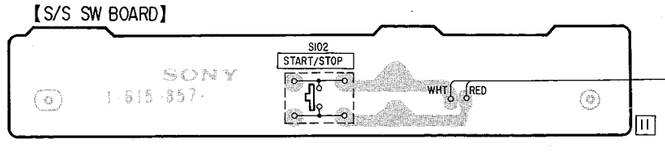

Note:

- Color code of sleeving over the end of the jacket.

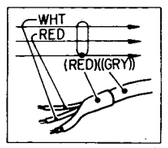

- ○— : parts extracted from the component side.
- ▒▒ : B + pattern

4-1. MOUNTING DIAGRAM
– Conductor Side –

PS-LX320/340 **PS-LX320/340**

3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19

A B C D E F G H I J

Q, IC
D

103 106 102 105 107 108 IC101 110 401 109 301 104 110 IC102 101 109 115 106 108 101 103 104 102 111 112 113

WHT L-CH
RED R-CH
(GND)

【PHONO BOARD】

WHT RED BLK BLU WHT RED GRN BLK

PS-LX320

BLU WHT GRN RED

(TO TONEARM) BLK BLK

(CHASSIS)

PS-LX340

GRN BLU RED BLK WHT

【SYSTEM CONTROL (B) BOARD】

CNP4 SYNC
CNP3 CONTROL S IN
CNP2 CONTROL S OUT
RED WHT BLU YEL BLK

【SIZE (OUT) BOARD】

BLU YEL
Q301 5.2V

【SIZE (IN) BOARD】

Q401 5.4V RED WHT

【LAMP BOARD】

PLI01 (SIZE)
RED WHT

AEP, UK MODEL

【POWER BOARD】

PT POWER TRANSFORMER
AEP MODEL
UK MODEL
WHT BLU
VIO RED
BRW
AC IN
RED
RED VIO
AEP MODEL
UK MODEL

2 4 ORG WHT 3 S601 ARM REST ON OFF

RED BLK PMI02 SIZE SOLENOID

WHT RED RED BLK PMI01 START/STOP SOLENOID 1

S701 PLAY OFF ON

6.2V -0.5V 1.25μsec

【SYSTEM CONTROL (A) BOARD】

1 2 3 4

RED BLK RED BLK WHT ORG WHT RED BLK

Q103 12V SOLENOID ON: 0V
Q102 12V SOLENOID ON: 0V
Q106 0V (12V) 0.6V (0V) SOLENOID ON: 0.6V
SOLENOID ON: 0.7V
SOLENOID ON: 2.25V
SOLENOID ON: 2.2V
Q105 33rpm: 7.3V 44rpm: 5.8V 45rpm: 6.8V
Q107 33rpm: 6V 45rpm: 0V
Q108 6V PLAY SWITCH ON: 0V
Q109 33rpm: 0.18V 45rpm: 4.2V
Q110 STOP 3.5V 0V 0.4 sec
Q101 6V 7.5V 6.6V
Q104 6V 0V 5.8V
IC101 (12V) 33rpm: 7.3V 44rpm: 5.8V 0(11V) 33rpm: 8.4V 45rpm: 6.8V 12V
IC102 6V PLAY SWITCH ON: 0V 4.2V REPEAT LED ON: 0.18V 33rpm: 0.18V 45rpm: 4.2V START ARM DOWN 3.5V 0V 0.6sec
6V ARM REST MODE: 0V
6V WHEN PUSHING SI04 ON: 0V
6V WHEN PUSHING SI03 ON: 0V
6V WHEN PUSHING SI02 ON: 0V
33rpm: 4.2V 45rpm: 0.18V
5.8V 0V 1.25μsec
4V
5V
RV101 RV102
SWI03 REPEAT
SWI04 45 SPEED 33
DI08
DI11 REPEAT
DI12 33 SPEED
DI13 45
CNP1 RED WHT BLU YEL
US MODEL
CANADIAN, AEP, UK MODEL
DI01 DI04 DI03 DI02 DI05 DI06

MI01 TURNTABLE MOTOR DNR-7600A
RED WHT
arrow mark

US, CANADIAN MODEL

【POWER BOARD】

PT POWER TRANSFORMER
WHT RED ORG
AC IN

【POWER SW BOARD】

BLK WHT RED
SI01 POWER ON OFF

【S/S SW BOARD】

SI02 START/STOP
WHT RED

f the jacket.

onent side.

4-2. SCHEMATIC DIAGRAM

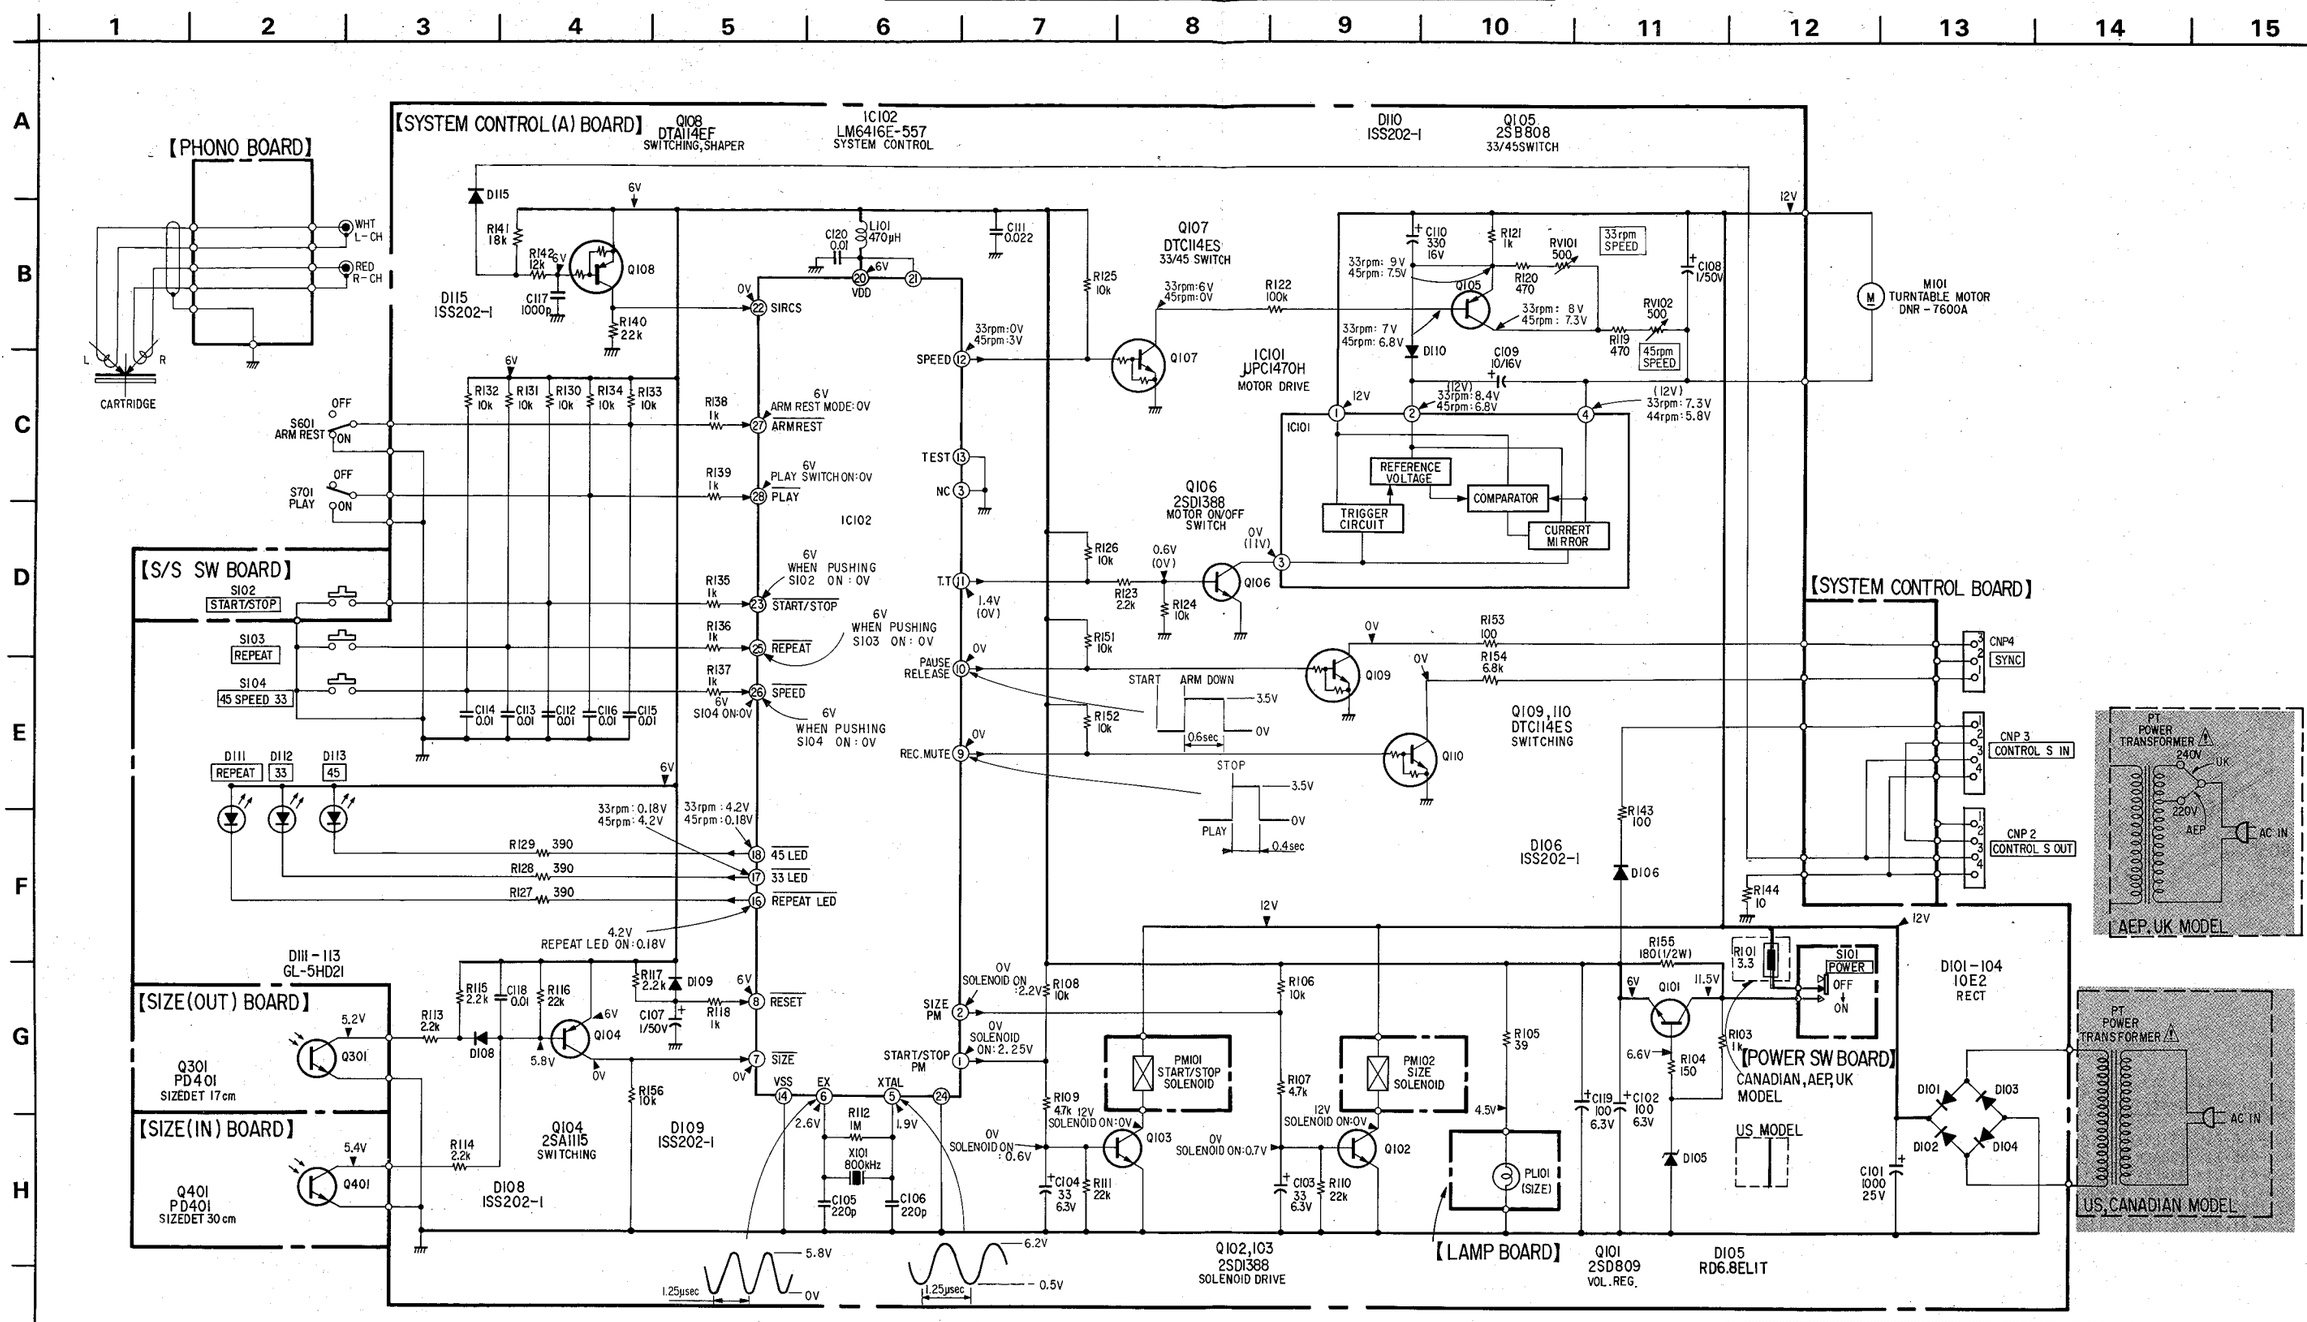

Note:

- All capacitors are in μF unless otherwise noted. pF: μμF 50 WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in Ω and 1/4 W or less unless otherwise specified.
- ▬▬ : B+ bus.
- ▭ : adjustment for repair.
- Voltages are dc with respect to ground unless otherwise noted.
- Readings are taken under no-signal conditions with a VOM (50kΩ/V).
  no mark : STOP
  ( ) : PLAY
- Voltage variations may be noted due to normal production tolerances.

Ref. No.	Switch	Position
S101	POWER	OFF
S102	START/STOP	OFF
S103	REPEAT	OFF
S104	SPEED	OFF
S601	ARM REST	ON
S701	PLAY	OFF

Note: The components identified by shading and mark ⚠ are critical for safety. Replace only with part number specified.

Note: Les composants identifiés par une trame et une marque ⚠ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

[IC102 (LM6414E-557) PIN FUNCTIONS]

IC102 (LM6414E-557) is an N-MOS 4 bit micro-computer for control integrating ROM, RAM, ALU, I/O port, timer, clock generator and etc., into 1-chip.

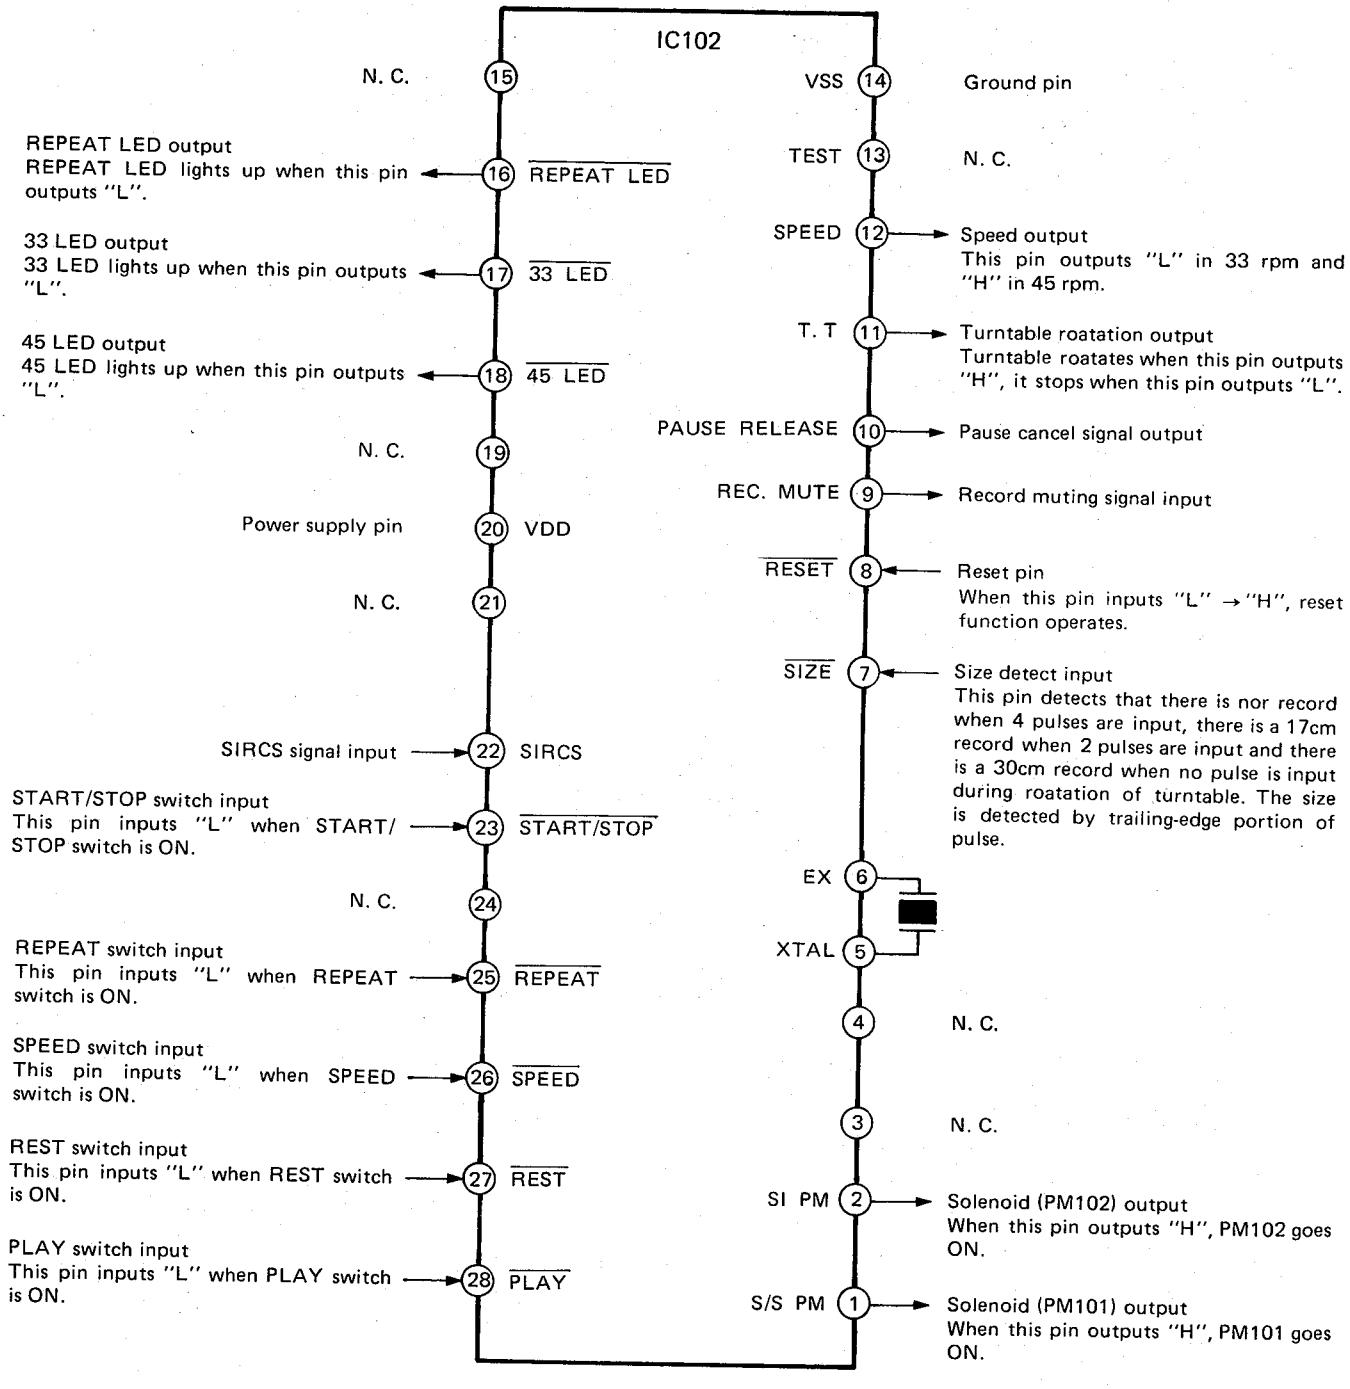
IC102
N. C. 15
REPEAT LED output
REPEAT LED lights up when this pin outputs "L". 16 REPEAT LED
33 LED output
33 LED lights up when this pin outputs "L". 17 33 LED
45 LED output
45 LED lights up when this pin outputs "L". 18 45 LED
N. C. 19
Power supply pin 20 VDD
N. C. 21
SIRCS signal input 22 SIRCS
START/STOP switch input
This pin inputs "L" when START/STOP switch is ON. 23 START/STOP
N. C. 24
REPEAT switch input
This pin inputs "L" when REPEAT switch is ON. 25 REPEAT
SPEED switch input
This pin inputs "L" when SPEED switch is ON. 26 SPEED
REST switch input
This pin inputs "L" when REST switch is ON. 27 REST
PLAY switch input
This pin inputs "L" when PLAY switch is ON. 28 PLAY
VSS 14 Ground pin
TEST 13 N. C.
SPEED 12 Speed output
This pin outputs "L" in 33 rpm and "H" in 45 rpm.
T. T 11 Turntable roatation output
Turntable roatates when this pin outputs "H", it stops when this pin outputs "L".
PAUSE RELEASE 10 Pause cancel signal output
REC. MUTE 9 Record muting signal input
RESET 8 Reset pin
When this pin inputs "L" → "H", reset function operates.
SIZE 7 Size detect input
This pin detects that there is nor record when 4 pulses are input, there is a 17cm record when 2 pulses are input and there is a 30cm record when no pulse is input during roatation of turntable. The size is detected by trailing-edge portion of pulse.
EX 6
XTAL 5
4 N. C.
3 N. C.
SI PM 2 Solenoid (PM102) output
When this pin outputs "H", PM102 goes ON.
S/S PM 1 Solenoid (PM101) output
When this pin outputs "H", PM101 goes ON.

SECTION 5
EXPLODED VIEWS AND PARTS LIST

NOTE:

- The mechanical parts with no reference number in the exploded views are not supplied.
- Items marked " ★ " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- The construction parts of an assembled part are indicated with a collation number in the remark column.

The components identified by shading and mark ⚠ are critical for safety. Replace only with part number specified.

Les composants identifiés par une trame et une marque ⚠ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

(1)

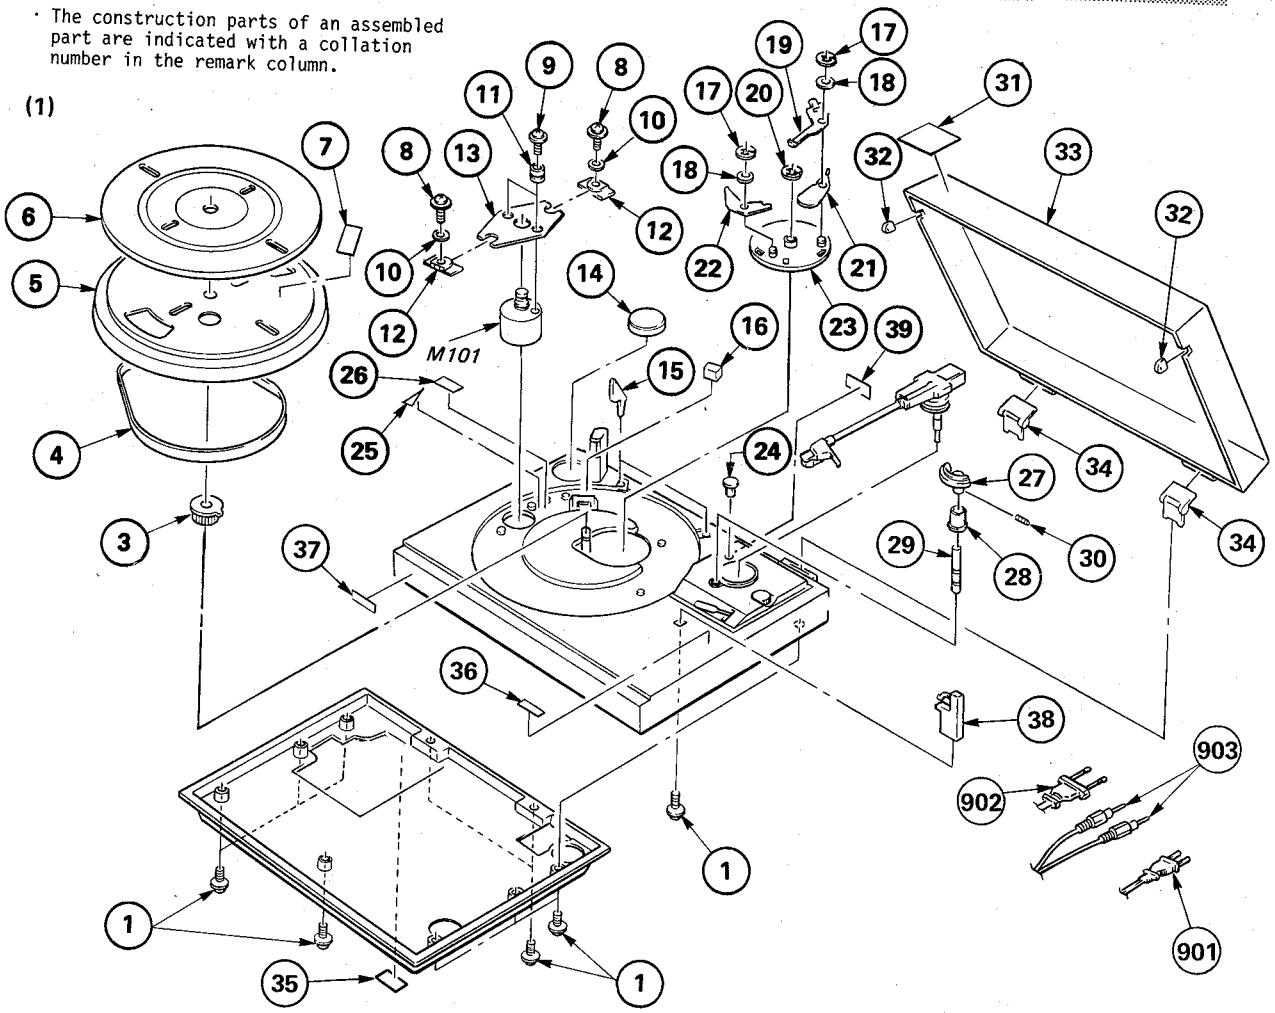

No.	Part No.	Description	Remarks
1	3-703-136-01	SCREW, +PTPWH 3X12	
2	4-889-532-01	(Canadian,AEP,UK)...PLATE, BOTTOM	
	4-889-532-11	(US).....PLATE, BOTTOM	
3	4-868-052-00	GEAR, CENTER	
4	4-827-489-XX	BELT	
5	X-4881-615-1	TURNTABLE ASSY	3
6	4-909-059-11	SHEET, TURNTABLE	
7	*4-909-004-01	LABEL, CAUTION, GEAR	
8	3-703-137-01	SCREW, PTPWH 3X10	
9	4-909-062-01	SCREW, MOTOR	
10	*4-301-647-00	WASHER, SPECIAL	
11	4-909-061-01	CUSHION, MOTOR	
12	4-908-120-01	RUBBER, FLOATING	
13	*4-908-106-01	BRACKET (B), MOTOR	
14	3-701-806-00	ADAPTOR, 45, (E)	
15	4-874-262-00	GUIDE, RECORD	
16	9-911-843-99	RUBBER, SENSOR	
17	7-624-190-81	STOP RING 2, TYPE-CS	
18	7-623-105-15	W 2, MIDDLE	
19	4-874-254-00	CLUTCH (S)	
20	7-624-106-04	STOP RING 3.0, TYPE -E	
21	4-874-232-00	CLUTCH (R)	
22	4-874-279-00	CLUTCH (L)	
23	4-880-524-00	GEAR (S), DRIVE	
24	4-874-260-01	(SILVER)...CAP, BLIND	
	4-874-260-11	(BLACK)....CAP, BLIND	
25	3-703-680-00	(US)....LABEL, CAUTION, SUB, NEW UL	
26	*3-701-030-00	LABEL, SERIAL NUMBER	
27	X-4903-302-1	PLATE ASSY, UP AND DOWN	3
28	*4-874-218-00	CASE, PUSH ROD	
29	4-881-688-00	ROD, PUSH	
30	7-621-738-08	SET-SCT, HEX. 2.6X4, FLAT POINT	
31	*3-703-705-01	STICKER, SONY SYMBOL (30)	
32	4-876-304-00	CUSHION, DUST COVER	
33	X-4877-804-0	COVER ASSY, DUST	31,3
34	4-857-653-00	HINGE, DUST COVER	
35	*4-876-344-01	(AEP)...LABEL, CAUTION, POWER CORD	
36	*4-885-792-01	(PS-LX340)...PLUG IN SEAL (A)	
37	3-701-690-01	(UK)....LABEL (MADE IN JAPAN)	
38	X-4874-212-1	(SILVER)...REST ASSY, ARM	
	X-4874-212-X	(BLACK)....REST ASSY, ARM	
39	*4-903-430-01	(PS-LX320:US,Canadian)..LABEL, MODEL NUM	
	*4-903-432-01	(PS-LX320:AEP).....LABEL, MODEL NUM	
	*4-903-433-01	(PS-LX340:US,Canadian)..LABEL, MODEL NUM	
	*4-903-435-01	(PS-LX340:AEP).....LABEL, MODEL NUM	
	*4-903-445-01	(UK).....LABEL, MODEL NUM	
901	⚠1-551-506-XX	(US,Canadian)...CORD, POWER	
	⚠1-556-562-11	(UK)....CORD, POWER	
902	⚠1-551-908-11	(AEP)...CORD, POWER, EULU PLUG	
903	1-551-294-00	CORD	

(2)

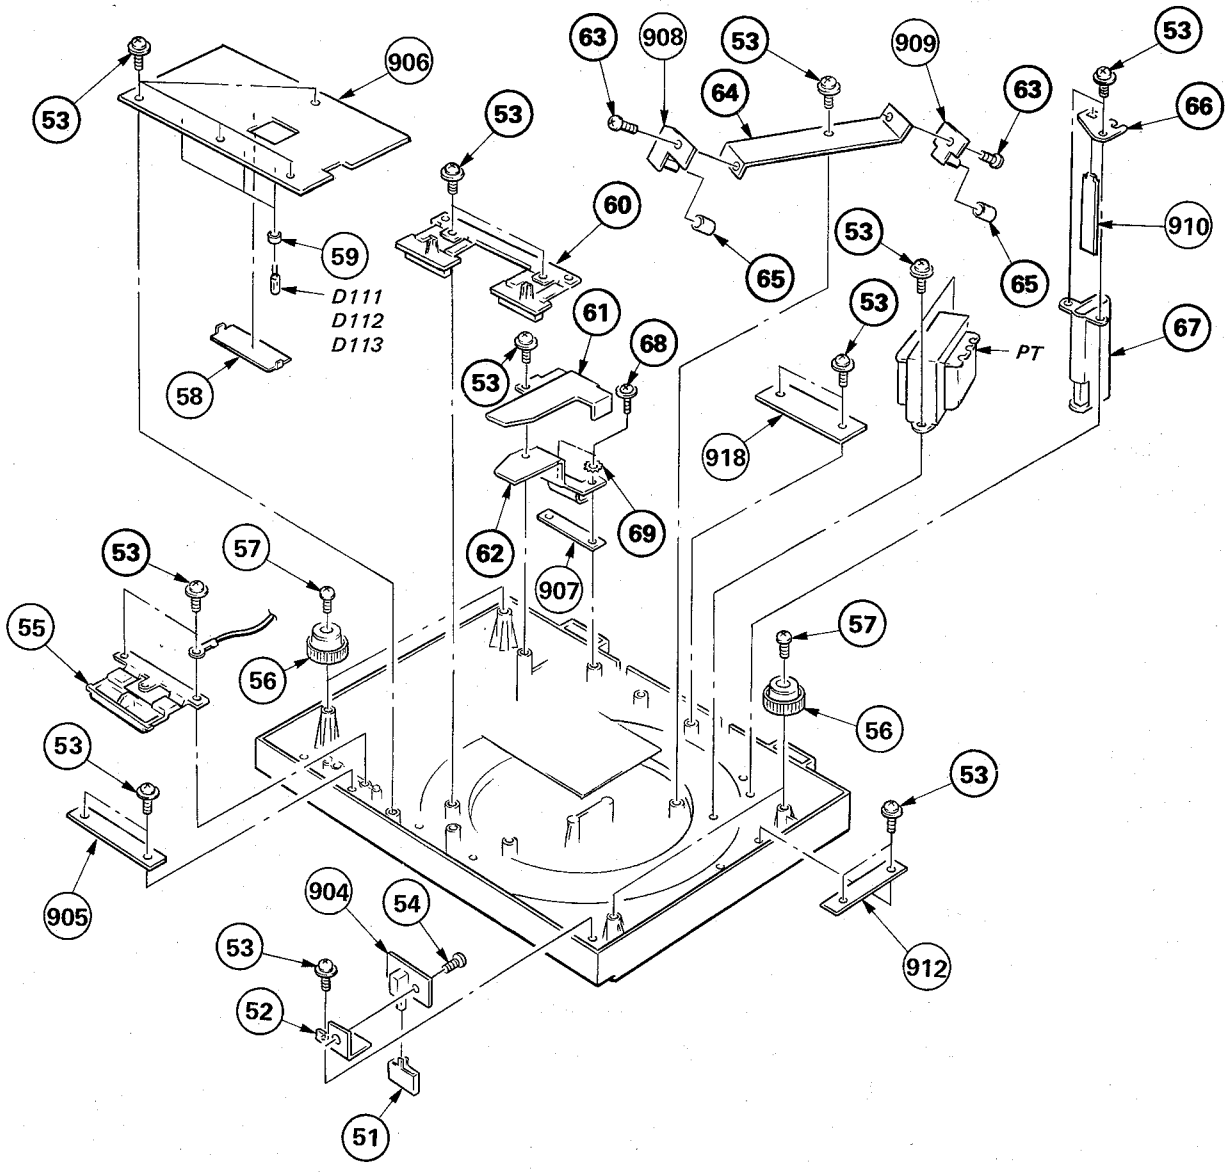

No.	Part No.	Description	Remarks
51	4-903-436-01	(SILVER)...BUTTON, POWER	
	4-903-436-11	(BLACK)....BUTTON, POWER	
52	*4-903-437-01	BRACKET, SWITCH	
53	3-703-137-01	SCREW, PTPWH 3X10	
54	7-621-755-00	SCREW, +B 2.6X4	
55	4-903-441-01	(SILVER)...BUTTON (S.S)	
	4-903-441-11	(BLACK)....BUTTON (S.S)	
56	X-4903-301-1	INSULATOR ASSY	
57	7-685-650-21	SCREW +BVTP 3X16 TYPE 2 SLIT	
58	*4-903-450-01	PLATE (P), SHIELD	
59	*4-901-657-00	SPACER (A), LED	
60	4-903-443-01	BUTTON (SR)	
61	*4-889-526-01	PLATE (UPPER), SHIELD	
62	*4-889-524-01	PLATE (LOWER), SHIELD	
63	7-685-750-04	SCREW +PTT 3X5 (S)	
64	*4-903-454-01	BRACKET, SENSOR	

No.	Part No.	Description	Remarks
65	4-852-841-00	(SILVER)...TUBU	
66	*4-874-255-00	BRACKET, CHASSIS	
67	X-4874-213-6	(SILVER)...HOUSE ASSY, LIGHT	
	X-4874-213-7	(BLACK)....HOUSE ASSY, LIGHT	
68	3-703-136-01	SCREW, +PTPWH 3X12	
69	7-623-422-07	LW 3	
904	*1-615-858-11	PC BOARD, POWER SW	
905	*1-615-857-11	PC BOARD, S/S SW	
906	*A-4619-269-A	MOUNTED PCB, SYSTEM CONTROL	911
907	*1-615-860-11	PC BOARD, PHONO	
908	*1-615-863-11	PC BOARD, SIZE (IN)	
909	*1-615-862-11	PC BOARD, SIZE (OUT)	
910	*1-615-859-11	PC BOARD, LAMP	
912	*1-615-861-11	PC BOARD, POWER	
911	*1-595-602-11	PC BOARD, SYSCON COMBINED	

(3)

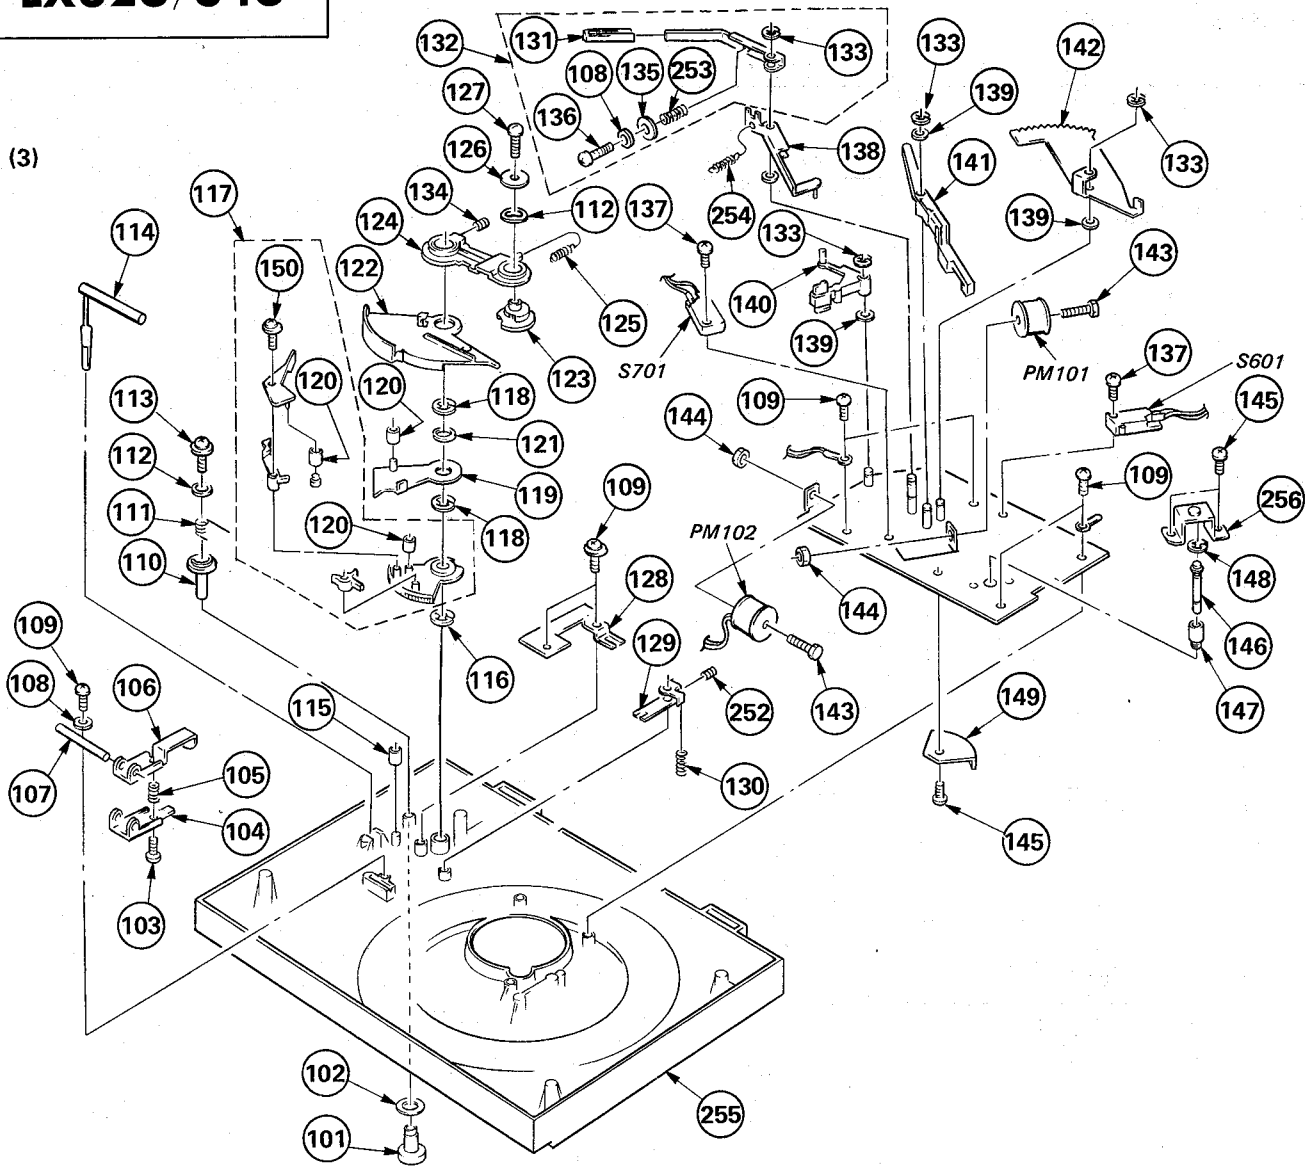

No.	Part No.	Description	Remarks
101	4-881-633-00	(PS-LX320)...KNOB (I), IFC	
	4-903-333-00	(PS-LX340)...KNOB (I), IFC	
102	4-844-041-11	WASHER, (N)	
103	7-621-775-80	SCREW +B 2.6X16	
104	*4-880-501-00	LEVER (A), LIFTER	
105	4-880-503-00	SPRING, COMPRESSION	
106	*4-881-659-00	LEVER (C), LIFTER	
107	*4-861-940-00	SHAFT, LIFTER LEVER	
108	*4-301-647-00	WASHER, SPECIAL	
109	3-703-137-01	SCREW, PTPWH 3X10	
110	4-903-409-01	CAM, IFC	
111	4-874-250-00	SPRING	
112	0-056-028-00	WASHER, PLAIN, 14 DIA.	
113	7-685-152-21	SCREW +P 3X25 TYPE 2 SLIT	
114	4-877-824-00	CAM, LIFTER	
115	4-852-841-00	TUBE	
116	7-624-133-54	STOP RING 10, TYPE-CE	
117	X-4881-610-0	LEVER (C) ASSY, INDEX	150,120
118	7-624-133-44	STOP RING 9, TYPE-CE	
119	*X-4874-209-0	LEVER (B) ASSY, INDEX	
120	4-874-259-00	RUBBER, SHOCK ABSORBING	
121	4-876-324-21	POLY-SLIDER (DIA. 9.5)	
122	4-874-223-00	LEVER (A), ARM	
123	4-874-231-00	CAM, ECCENTRIC	
124	4-874-277-00	LEVER (B), ARM	
125	3-548-124-00	SPRING, TENSION	
126	4-844-041-00	WASHER, (N)	
127	7-685-145-14	SCREW +P 3X6 TYPE2 SLIT	
128	*4-903-410-01	RETAINER (C), LIFTER	
129	*4-876-317-00	GUIDE, LIFTER	
130	4-903-331-01	SPRING (LIFTER), COMPRESSION	
131	4-874-275-00	PAD, BRAKE	
132	*X-4874-206-0	LEVER ASSY, BRAKE	108,131,135,136,253
133	7-624-106-04	STOP RING 3.0, TYPE -E	
134	3-701-509-00	SET SCREW, DOUBLE CUP 3X8	
135	4-812-554-00	WASHER	
136	7-682-110-01	SCREW +P 3X18	
137	7-685-755-01	SCREW +PTT 3X14 (S)	
138	*X-4874-205-0	LEVER ASSY, RESET	
139	3-701-441-21	WASHER	
140	X-4874-204-0	LEVER ASSY, SIZE	
141	X-4874-203-0	LEVER ASSY, CLUTCH	
142	*X-4874-202-0	LEVER ASSY, MAIN	
143	4-874-234-00	CORE	
144	7-622-207-05	N 2.6, TYPE 2	
145	7-682-546-04	SCREW +BVTT 3X5 (S)	
146	4-889-523-01	SHAFT, CENTER	
147	4-909-022-01	BEARING (B)	
148	7-624-133-34	STOP RING 8, TYPE-CE	
149	*4-903-438-01	PLATE, RESET	
150	7-687-202-21	TOTSU PTPWH 2X4, TYPE 2, SLIT	
251	*X-4903-405-1	CHASSIS ASSY	
252	7-621-741-09	SEC-SCREW, HEX, 2.6X8	
253	4-876-322-00	SPRING, COMPRESSION (BRAKE)	
254	4-876-346-00	SPRING, TENSION (RESET)	
255	X-4903-406-1	(PS-LX320:US,Canadian)(SILVER)..FRAME ASSY	
	X-4903-407-1	(PS-LX320:US,Canadian)(BLACK)...FRAME ASSY	
	X-4903-408-1	(PS-LX320:AEP,UK)(SILVER)...FRAME ASSY	
	X-4903-409-1	(PS-LX320:AEP,UK)(BLACK)....FRAME ASSY	
	X-4903-410-1	(PS-LX340:US,Canadian)(SILVER)..FRAME ASSY	
	X-4903-411-1	(PS-LX340:US,Canadian)(BLACK)...FRAME ASSY	
	X-4903-412-1	(PS-LX340:AEP)(SILVER)...FRAME ASSY	
	X-4903-413-1	(PS-LX340:AEP)(BLACK)....FRAME ASSY	
256	*4-909-021-01	BRACKET, BEARING	

(4) PS-LX320

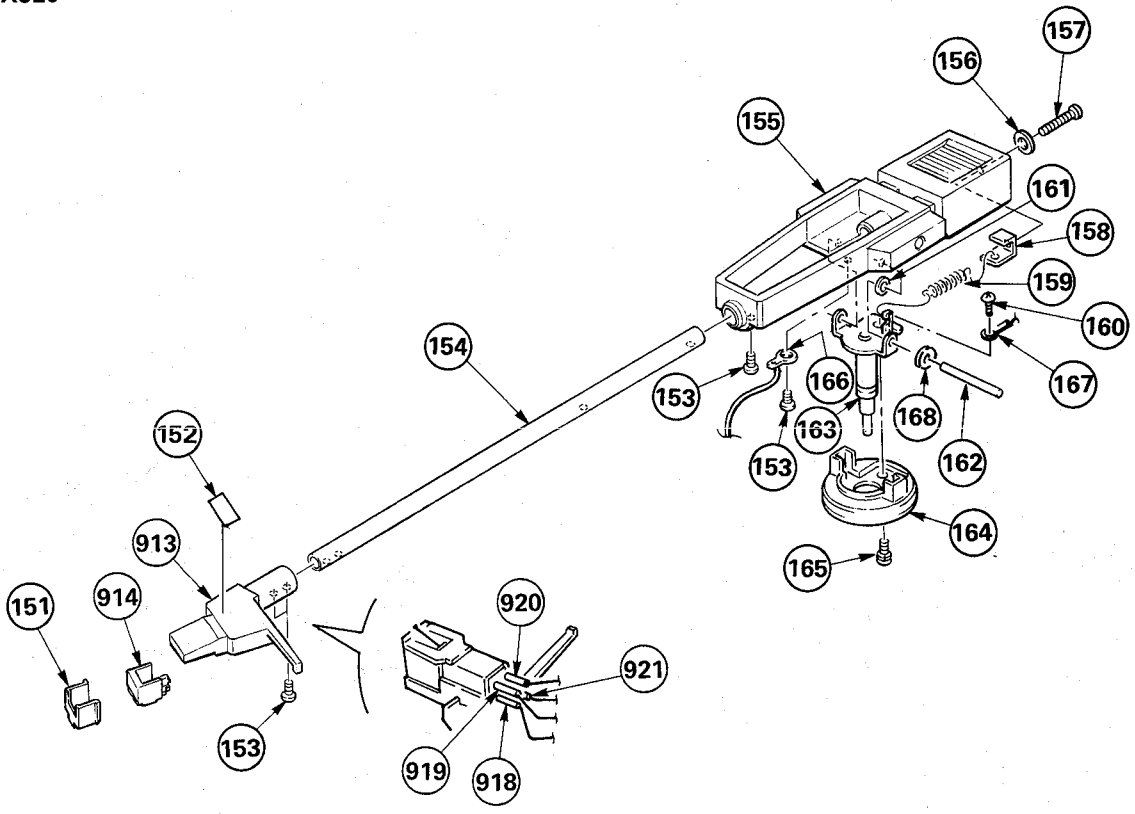

No.	Part No.	Description	Remarks
151	3-706-613-00	PROTECTOR	
152	*3-706-612-00	LABEL, CARTRIDGE	
153	7-685-103-24	(SILVER)...SCREW +P 2X5 TYPE2 SLIT	
	7-621-771-06	(BLACK)....SCREW +P 2X5 TYPE2 SLIT	
154	4-889-528-01	(SILVER)...PIPE, ARM	
	4-889-528-11	(BLACK)....PIPE, ARM	
155	4-889-529-01	(SILVER)...JOINT, PIPE	
	4-889-529-11	(BLACK)....JOINT, PIPE	
156	7-688-003-11	W 3, MIDDLE	
157	7-682-555-04	(SILVER)...SCREW +B 3X30	
	7-682-555-09	(BLACK)....SCREW +B 3X30	
158	4-868-016-00	HOOK, SPRING	
159	4-889-510-00	SPRING, TENSION	
160	7-682-545-09	SCREW +B 3X4	
161	3-701-437-01	WASHER	
162	4-880-619-00	PIN, HORIZONTAL	
163	X-4881-614-0	POTOR ASSY	

No.	Part No.	Description	Remarks
164	4-880-631-00	(SILVER)...JOINT, CENTER	
	4-880-631-11	(BLACK)....JOINT, CENTER	
165	7-682-647-01	SCREW +PS 3X6	
166	7-623-505-01	LUG, 2	
167	7-623-508-01	(BLACK)...LUG, 3	
168	3-701-437-01	2ø WASHER	
913	1-549-109-00	(SILVER)...CARTRIDGE	(WITH SHELL) (VL-42G) 151,152,914
	1-549-109-21	(BLACK)....CARTRIDGE	(WITH SHELL) (VL-42G) 151,152,914
914	*3-706-614-00	(SILVER)...SHELL	
	3-706-614-11	(BLACK)....SHELL	
918	1-556-044-11	LEAD (WITH TERMINAL)	
919	1-556-044-21	LEAD (WITH TERMINAL)	
920	1-556-044-31	LEAD (WITH TERMINAL)	
921	1-556-044-41	LEAD (WITH TERMINAL)	

(5) PS-LX340

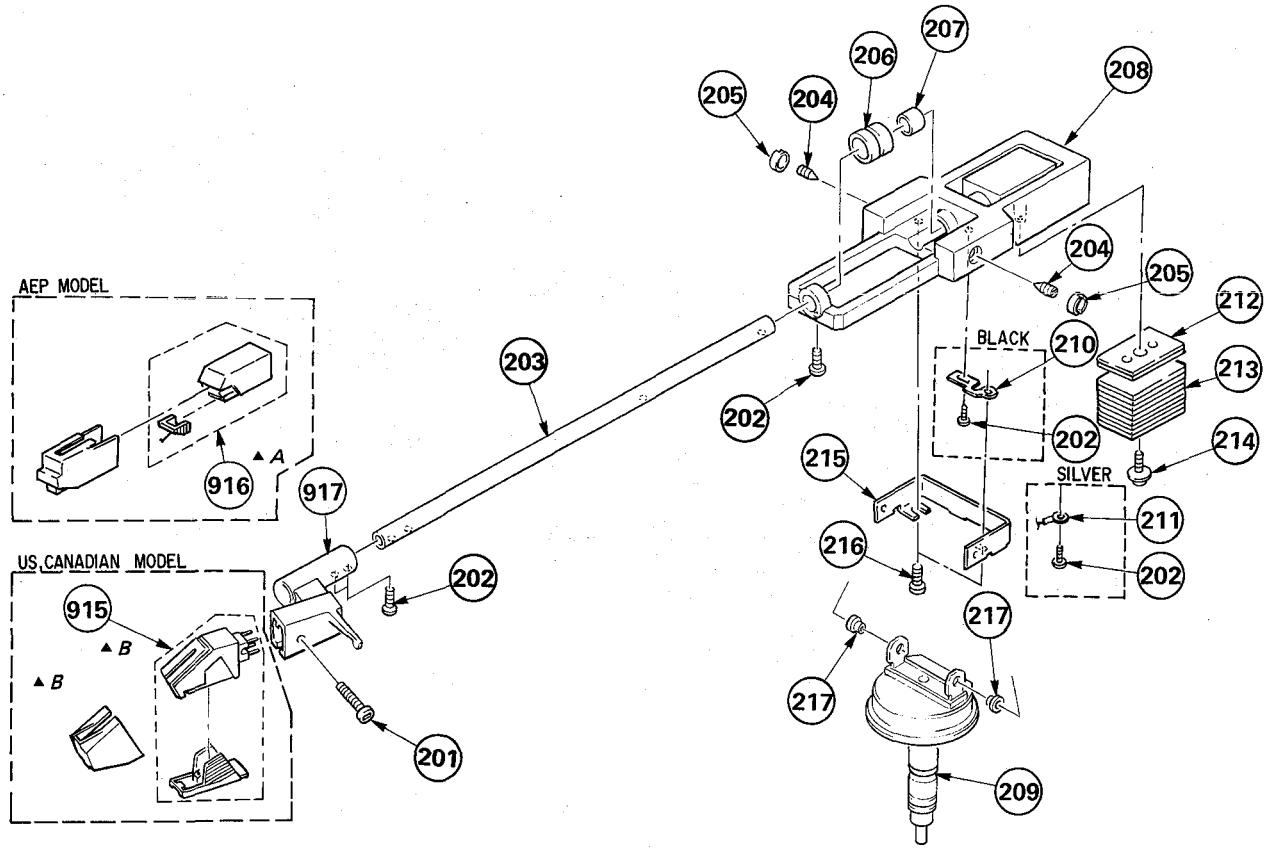

No.	Part No.	Description	Remarks
201	4-887-481-01	(BLACK)....SCREW (B), CARTRIDGE FITTING	
	4-887-481-11	(SILVER)...SCREW (B), CARTRIDGE FITTING	
202	7-685-103-24	(SILVER)...SCREW +P 2X5 TYPE 2 SLIT	
	7-621-771-06	(BLACK)....SCREW +P 2X5 TYPE 2 SLIT	
203	4-903-307-01	(SILVER)...PIPE, ARM	
	4-903-307-11	(BLACK)....PIPE, ARM	
204	2-203-518-61	SCREW, PIVOT	
205	2-203-519-02	NUT (A), LOCK, PIVOT	
206	*4-903-312-01	(SILVER)...WEIGHT, SUB	
	*4-903-312-11	(BLACK)....WEIGHT, SUB	
207	*4-903-308-01	SHEET (S)	
208	4-903-336-01	(SILVER)...JOINT, PIPE	
	4-903-336-11	(BLACK)....JOINT, PIPE	
209	X-4881-611-1	(SILVER)...JOINT ASSY, CENTER	
	X-4881-611-2	(BLACK)....JOINT ASSY, CENTER	

No.	Part No.	Description	Remarks
210	7-623-505-01	(SILVER)...LUG, 2	
211	*4-889-539-01	(BLACK)....PLATE, GROUND	
212	*4-903-350-01	WEIGHT, SUPPORT	
213	4-887-810-01	WEIGHT	
214	7-685-134-14	SCREW, TOTSU PTPWH 2.6X8, TYPE 2	
215	*4-881-628-01	REINFORCEMENT (A)	
216	7-685-105-24	(SILVER)...SCREW +P 2X8 TYPE 2 SILT	
	7-685-105-29	(BLACK)....SCREW +P 2X8 TYPE 2 SILT	
217	4-881-618-01	BEARING, PIVOT	
915	1-549-117-11	(US,Canadian:SILVER)...CARTRIDGE (VL-45G)	
	1-549-117-21	(US,Canadian:BLACK)....CARTRIDGE (VL-45G)	
916	A-4505-110-A	(AEP)...OVERALL ASSY, CARTRIDGE	
917	*1-562-517-31	(SILVER)...CONNECTOR (WITH HEAD SHELL 4P)	
	*1-562-517-41	(BLACK)....CONNECTOR (WITH HEAD SHELL 4P)	

SECTION 6
ELECTRICAL PARTS LIST

NOTE:
- Items marked " ★ " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- If there are two or more same circuitsin a set such as a stereophonic machine, only typical circuit parts may be indicated and capacitors and resistors in other same circuits may be omitted.

CAPACITORS:
MF:μF, PF:μμF.

RESISTORS
- All resistors are in ohms.
- F : nonflammable

COILS
- MMH : mH, UH : μH

SEMICONDUCTORS
In each case, U : μ, for example:
UA...: μA..., UPA...: μPA..., UPC...: μPC, UPD...: μPD...

The components identified by shading and mark ⚠ are critical for safety. Replace only with part number specified.

Les composants identifiés par une trame et une marque ⚠ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

ELECTRICAL PARTS

Ref.No.	Part No.	Description			
901	⚠1-551-506-XX	(US,Canadian)...CORD, POWER			
	⚠1-556-562-11	(UK).....CORD, POWER			
902	⚠1-551-908-11	(AEP)...CORD, POWER, EURO PLUG			
903	1-551-294-00	CORD			
904	*1-615-858-11	PC BOARD, POWER SW			
905	*1-615-857-11	PC BOARD, S/S SW			
906	*A-4619-269-A	MOUNTED PCB, SYSTEM CONTROL			
907	*1-615-860-11	PC BOARD, PHONO			
908	*1-615-863-11	PC BOARD, SIZE (IN)			
909	*1-615-862-11	PC BOARD, SIZE (OUT)			
910	*1-615-859-11	PC BOARD, LAMP			
912	*1-615-861-11	PC BOARD, POWER			
913	1-549-109-00	(SILVER)..CARTRIDGE(WITH SHELL)(VL-42G)			
	1-549-109-21	(BLACK)...CARTRIDGE(WITH SHELL)(VL-42G)			
914	*3-706-614-00	(SILVER)...SHELL			
	3-706-614-11	(BLACK)....SHELL			
915	1-549-117-11	(US,Canadian:SILVER)...CARTRIDGE(VL-45G)			
	1-549-117-21	(US,Canadian:BLACK)....CARTRIDGE(VL-45G)			
916	A-4505-110-A	(AEP)...OVERALL ASSY, CARTRIDGE			
917	*1-562-517-31	(SILVER)...CONNECTOR(WITH HEAD SHELL 4P)			
	*1-562-517-41	(BLACK)....CONNECTOR(WITH HEAD SHELL 4P)			
918	1-556-044-11	LEAD (WITH TERMINAL)			
	*1-595-602-11	PC BOARD, SYSCON COMBINED			
919	1-556-044-21	LEAD, WITH TERMINAL			
920	1-556-044-31	LEAD (WITH TERMINAL)			
921	1-556-044-41	LEAD (WITH TERMINAL)			
C101	1-123-337-00	ELECT	1000MF	20%	25V
C102	1-123-661-00	ELECT	100MF	20%	6.3V
C103	1-123-646-00	ELECT	33MF	20%	6.3V
C104	1-123-646-00	ELECT	33MF	20%	6.3V
C105	1-162-286-31	CERAMIC	220PF	10%	50V
C106	1-162-286-31	CERAMIC	220PF	10%	50V
C107	1-123-611-00	ELECT	1MF	20%	50V
C108	1-123-611-00	ELECT	1MF	20%	50V
C109	1-123-617-00	ELECT	10MF	20%	16V
C110	1-123-322-00	ELECT	330MF	20%	16V
C111	1-161-494-00	CERAMIC	0.022MF	30%	25V
C112	1-162-306-31	CERAMIC	0.01MF	30%	16V
C113	1-162-306-31	CERAMIC	0.01MF	30%	16V
C114	1-162-306-31	CERAMIC	0.01MF	30%	16V
C115	1-162-306-31	CERAMIC	0.01MF	30%	16V
C116	1-162-306-31	CERAMIC	0.01MF	30%	16V
C117	1-162-294-31	CERAMIC	0.001MF	10%	50V
C118	1-162-306-31	CERAMIC	0.01MF	30%	16V
C119	1-123-661-00	ELECT	100MF	20%	6.3V
C120	1-162-306-31	CERAMIC	0.01MF	30%	16V

ELECTRICAL PARTS

Ref.No.	Part No.	Description			
CNP1	*1-564-706-11	PIN, CONNECTOR (SMALL TYPE) 4P			
CNP2	*1-564-980-11	PIN, CONNECTOR 4P (CONTROL S OUT)			
CNP3	*1-564-980-11	PIN, CONNECTOR 4P (CONTROL S IN)			
CNP4	1-564-358-00	PIN, CONNECTOR 3P (SYNC)			
D101	8-719-200-02	DIODE 10E2			
D102	8-719-200-02	DIODE 10E2			
D103	8-719-200-02	DIODE 10E2			
D104	8-719-200-02	DIODE 10E2			
D105	8-719-102-76	DIODE RD6.8E-N1			
D106	8-719-107-94	DIODE 1SS202-1			
D108	8-719-107-94	DIODE 1SS202-1			
D109	8-719-107-94	DIODE 1SS202-1			
D110	8-719-107-94	DIODE 1SS202-1			
D111	8-719-906-58	DIODE GL-5HD21			
D112	8-719-906-58	DIODE GL-5HD21			
D113	8-719-906-58	DIODE GL-5HD21			
D115	8-719-107-94	DIODE 1SS202-1			
IC101	8-759-103-35	IC UPC1470H			
IC102	8-759-801-85	IC LM6416E-557			
L101	1-407-177-XX	MICRO INDUCTOR 470UH			
M101	8-835-126-01	MOTOR, DC (DNR-7600A)			
PL101	1-518-268-00	LAMP,PILOT			
PM101	1-454-394-21	SOLENOID, PLUNGER			
PM201	1-454-394-21	SOLENOID, PLUNGER			
PT	⚠1-448-196-11	(AEP,UK).....TRANSFORMER, POWER			
PT	⚠1-448-195-11	(US,Canadian)...TRANSFORMER, POWER			
Q101	8-729-180-93	TRANSISTOR 2SD809			
Q102	8-729-802-34	TRANSISTOR 2SD1388			
Q103	8-729-802-34	TRANSISTOR 2SD1388			
Q104	8-729-173-37	TRANSISTOR 2SA733-P			
Q105	8-729-800-83	TRANSISTOR 2SB808			
Q106	8-729-802-34	TRANSISTOR 2SD1388			
Q107	8-729-900-80	TRANSISTOR DTC114ES			
Q108	8-729-900-38	TRANSISTOR DTA114EF			
Q109	8-729-900-80	TRANSISTOR DTC114ES			
Q110	8-729-900-80	TRANSISTOR DTC114ES			
Q301	8-729-902-39	TRANSISTOR PD401			
Q401	8-729-902-39	TRANSISTOR PD401			
R101	1-806-883-11	(CAanadian,AEP,UK)..THERMISTOR(POSITIVE)			
R103	1-247-831-00	CARBON	1K	5%	1/6W
R104	1-247-811-00	CARBON	150	5%	1/6W
R105	1-247-097-00	CARBON	39	5%	1/4W
R106	1-247-855-00	CARBON	10K	5%	1/6W
R107	1-247-847-00	CARBON	4.7K	5%	1/6W

ELECTRICAL PARTS

Ref.No.	Part No.	Description			
R108	1-247-855-00	CARBON	10K	5%	1/6W
R109	1-247-847-00	CARBON	4.7K	5%	1/6W
R110	1-247-863-00	CARBON	22K	5%	1/6W
R111	1-247-863-00	CARBON	22K	5%	1/6W
R112	1-247-903-00	CARBON	1M	5%	1/6W
R113	1-249-421-11	CARBON	2.2K	5%	1/6W
R114	1-249-421-11	CARBON	2.2K	5%	1/6W
R115	1-247-863-00	CARBON	22K	5%	1/6W
R116	1-247-863-00	CARBON	22K	5%	1/6W
R117	1-249-421-11	CARBON	2.2K	5%	1/6W
R118	1-247-831-00	CARBON	1K	5%	1/6W
R119	1-214-721-00	METAL	470	1%	1/4W
R120	1-214-719-00	METAL	390	1%	1/4W
R121	1-247-831-00	CARBON	1K	5%	1/6W
R122	1-247-879-00	CARBON	100K	5%	1/6W
R123	1-249-421-11	CARBON	2.2K	5%	1/6W
R124	1-247-855-00	CARBON	10K	5%	1/6W
R125	1-247-855-00	CARBON	10K	5%	1/6W
R126	1-247-855-00	CARBON	10K	5%	1/6W
R127	1-247-821-00	CARBON	390	5%	1/6W
R128	1-247-821-00	CARBON	390	5%	1/6W
R129	1-247-821-00	CARBON	390	5%	1/6W
R130	1-247-855-00	CARBON	10K	5%	1/6W
R131	1-247-855-00	CARBON	10K	5%	1/6W
R132	1-247-855-00	CARBON	10K	5%	1/6W
R133	1-247-855-00	CARBON	10K	5%	1/6W
R134	1-247-855-00	CARBON	10K	5%	1/6W
R135	1-247-831-00	CARBON	1K	5%	1/6W
R136	1-247-831-00	CARBON	1K	5%	1/6W
R137	1-247-831-00	CARBON	1K	5%	1/6W
R138	1-247-831-00	CARBON	1K	5%	1/6W
R139	1-247-831-00	CARBON	1K	5%	1/6W
R140	1-247-863-00	CARBON	22K	5%	1/6W
R141	1-247-861-00	CARBON	18K	5%	1/6W
R142	1-247-857-00	CARBON	12K	5%	1/6W
R143	1-247-807-00	CARBON	100	5%	1/6W
R144	1-247-783-00	CARBON	10	5%	1/6W
R151	1-247-855-00	CARBON	10K	5%	1/6W
R152	1-247-855-00	CARBON	10K	5%	1/6W
R153	1-247-807-00	CARBON	100	5%	1/6W
R154	1-247-851-00	CARBON	6.8K	5%	1/6W
R155	1-247-222-00	CARBON	180	5%	1/2W
R156	1-247-855-00	CARBON	10K	5%	1/6W
RV101	1-226-232-00	RES, ADJ, CARBON 500			
RV102	1-226-232-00	RES, ADJ, CARBON 500			

ELECTRICAL PARTS

Ref.No.	Part No.	Description
S101	⚠1-553-909-00	SWITCH, PUSH (1 KEY)(POWER)
S102	1-553-856-00	SWITCH, KEY BOARD (START/STOP)
S103	1-553-856-00	SWITCH, KEY BOARD (REPEAT)
S104	1-553-856-00	SWITCH, KEY BOARD (SPEED)
S601	1-570-149-11	SWITCH, MICRO (ARMLEST)(PLAY)
S701	1-570-149-11	SWITCH, MICRO (ARMLEST)(PLAY)
X101	1-567-342-11	OSCILLATOR, CERAMIC

ACCESSORY & PACKING MATERIAL

Part No.	Description
1-556-372-41	CORD, CONNECTION (4 CORE)
1-557-109-21	CORD, CONNECTION
3-701-630-00	BAG, POLYETHYLENE
3-701-634-00	BAG, POLYETHYLENE
3-701-690-01	(UK)....LABEL (MADE IN JAPAN)
3-701-806-00	ADAPTOR, 45, (E)
3-703-680-00	(US)...LABEL, CAUTION, SUB, NEW UL
3-760-544-11	(Canadian,AEP,UK)...MANUAL, INSTRUCTION
3-760-544-21	(US).....MANUAL, INSTRUCTION
3-760-544-41	(AEP).....MANUAL, INSTRUCTION
3-794-123-11	LABEL, CAUTION
4-862-043-00	CUSHION, ARM
4-862-680-00	(BLACK)....PROTECTOR
4-862-680-00	(SILVER)...PROTECTOR
4-874-262-00	GUIDE, RECORD
4-876-320-00	SPACER, CLUTCH
*4-876-344-01	(AEP)...LABEL, CAUTION, POWER CORD
4-876-352-00	SHEET, PROTECTION
4-881-698-00	PLATE, PROTECTION
*4-885-792-01	(PS-LX340)...PLUG IN SEAL (A)
4-889-536-01	CUSHION (LEFT)
4-889-537-01	CUSHION (RIGHT)
4-889-538-01	HOLDER, TURNTABLE
4-903-422-01	(PS-LX340)...HOLDER, ARM
4-903-430-01	(PS-LX320:US,Canadian)...LABEL, MODEL NUMBER
4-903-432-01	(PS-LX320:AEP).....LABEL, MODEL NUMBER
4-903-433-01	(PS-LX340:US,Canadian)...LABEL, MODEL NUMBER
4-903-435-01	(PS-LX340:AEP).....LABEL, MODEL NUMBER
4-903-445-01	(UK).....LABEL, MODEL NUMBER
4-903-447-01	INDIVIDUAL CARTON
*4-909-004-01	LABEL, CAUTION, GEAR
4-909-059-11	(US).....SHEET, TURNTABLE
4-909-059-01	(Canadian,AEP,UK)...SHEET, TURNTABLE

The components identified by shading and mark ⚠ are critical for safety. Replace only with part number specified.

Les composants identifiés par une trame et une marque ⚠ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

English
85E0490-1
Printed in Japan
© 1985